




## AMANA® THREE BURNER GAS GRILL

### Assembly/Installation Instructions and Use & Care Guide

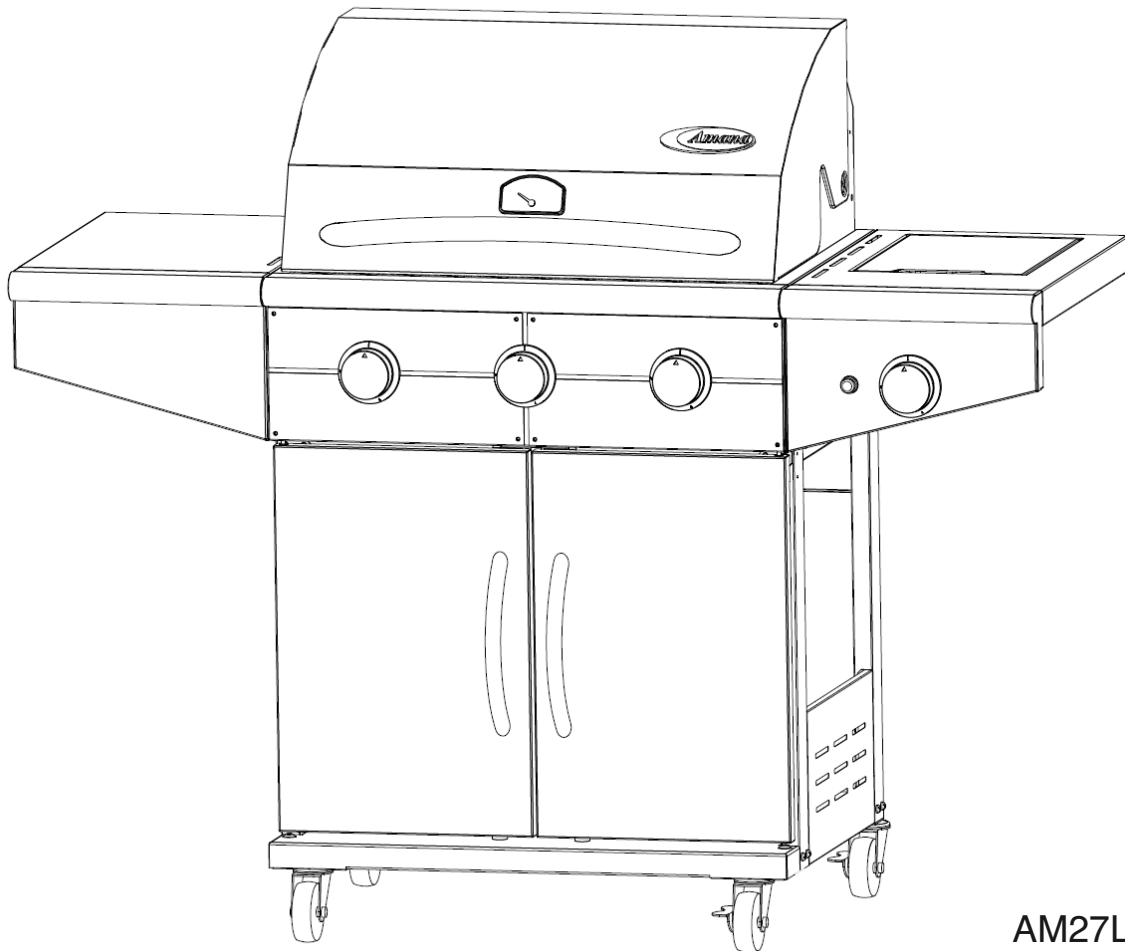

AM27LP  
DPCI 009 07 0291

## FOR OUTDOOR USE ONLY

For questions about features, operation/performance, parts, accessories or service,  
call: 1-800-229-5647 or visit our website at [www.sureheat.com](http://www.sureheat.com)

**IMPORTANT:**

Save for local inspector's use.

**Installer:** Leave installation instructions with the homeowner.

**Homeowner:** Keep installation instructions for future reference.

# TABLE OF CONTENTS

OUTDOOR GRILL SAFETY.....	3-4
UNPACKING INSTRUCTIONS.....	5
ASSEMBLY REQUIREMENTS.....	5-6
Parts Supplied.....	6
Tools Needed.....	6
Assembled Grill View.....	7
ASSEMBLY INSTRUCTIONS.....	8-24
Step 1: Assemble Grill Cart Base.....	8
Step 2: Assemble Grill Cart Sides.....	9
Step 3: Assemble Casters.....	10
Step 4: Assemble Grill Cart back.....	11
Step 5: Assemble Cart Front Top Bar.....	12
Step 6: Assemble Grill Cart Door.....	13
Step 7: Assemble Grill Head Assembly.....	14
Step 8: Assemble Side Shelf Left.....	15
Step 9: Assemble Side Burner Shelf Right.....	16
Step 10: Assemble the Side Burner Valve.....	17
Step 11: Assemble the Side Burner Casting.....	18
Step 12: Assemble the Side Burner Bracket.....	19
Step 13: Assemble Igniter Module.....	20
Step 14: Assemble the Side Burner Accessories.....	21
Step 15: Assemble the Drip Pan.....	22
Step 16: Complete the grill assembly.....	23
INSTALLATION REQUIREMENTS.....	24-26
Location Requirements.....	24
Product Dimensions.....	25
Gas Supply Requirements.....	25
Gas Pressure Regulator.....	25
Burner Requirements for High Altitude.....	25
Gas Supply Line Pressure Testing.....	26
INSTALLATION INSTRUCTIONS.....	26-27
20 lb LP Gas Fuel Cylinder.....	26
Make Gas Connection.....	26
Check and Adjust the Burners.....	27
Burner Flame Characteristics.....	27
OUTDOOR GRILL USE.....	28-29
Using Your Outdoor Grill.....	28-29
Using Your Side Burner.....	29
TIPS FOR OUTDOOR GRILLING.....	30
Cooking Methods.....	30
OUTDOOR GRILL CARE.....	31
Replacing the Igniter Battery.....	31
General Cleaning.....	31-33
TROUBLESHOOTING.....	34
ASSISTANCE.....	34
REPLACEMENT PARTS.....	35-37
WARRANTY.....	38

# OUTDOOR GRILL SAFETY

## Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING."

These words mean:

**⚠ DANGER**

You can be killed or seriously injured if you don't **immediately** follow instructions.

**⚠ WARNING**

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

### **⚠ DANGER**

If you smell gas:

1. Shut off gas to the appliance.
2. Extinguish any open flame.
3. Open lid.
4. If odor continues, keep away from the appliance and immediately call your gas supplier or your fire department.

### **⚠ WARNING**

1. Do not store or use gasoline or other flammable liquids or vapors in the vicinity of this or any other appliance.
2. An LP cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.

The California Safe Drinking Water and Toxic Enforcement Act requires the Governor of California to publish a list of substances known to the State of California to cause cancer, birth defects, or other reproductive harm, and requires businesses to warn of potential exposure to such substances.

**WARNING:** This product contains a chemical known to the State of California to cause cancer, birth defects, or other reproductive harm.

This appliance can cause low-level exposure to some of the substances listed, including benzene, formaldehyde, carbon monoxide, toluene, and soot.

In the State of Massachusetts, the following installation instructions apply:

- Installations and repairs must be performed by a qualified or licensed contractor, plumber, or gas fitter qualified or licensed by the State of Massachusetts.
- If using a ball valve, it shall be a T-handle type.
- A flexible gas connector, when used, must not exceed 3 feet.

**IMPORTANT:** This grill is manufactured for outdoor use only. For grills that are to be used at elevations above 2000 ft (609.6 m) orifice conversion is required. See “Gas Supply Requirements” section. It is the responsibility of the installer to comply with the minimum installation clearances specified on the model/serial rating plate. The model/serial rating plate for freestanding models can be found on inside of the right cart door.

## **IMPORTANT SAFETY INSTRUCTIONS**

**WARNING:** To reduce the risk of fire, electrical shock, injury to persons, or damage when using the outdoor cooking gas appliance, follow basic precautions, including the following:

- Do not install portable or built-in outdoor cooking gas appliances in or on a recreational vehicle, portable trailer, boat or in any other moving installation.
- Always maintain minimum clearances from combustible construction, see “Location Requirements” section.
- The outdoor cooking gas appliance shall not be located under overhead unprotected combustible construction.
- This outdoor cooking gas appliance shall be used only outdoors and shall not be used in a building, garage, or any other enclosed area.
- Keep any electrical supply cord and fuel supply hose away from any heated surfaces.
- Keep outdoor cooking gas appliance area clear and free from combustible materials, gasoline and other flammable vapors and liquids.
- Do not obstruct the flow of combustion and ventilation air. Keep the ventilation openings of the cylinder enclosure free and clear from debris.
- Inspect the gas cylinder supply hose before each use of the outdoor cooking gas appliance. If the hose shows excessive abrasion or wear, or is cut, it **MUST** be replaced before using the outdoor cooking gas appliance. Contact your dealer and use only replacement hoses specified for use with the outdoor cooking gas appliance.
- Visually check the burner flames. They should be blue. Slight yellow tipping is normal for LP gas.
- Check and clean burner/venturi tube for insects and insect nest. A clogged tube can lead to fire under the outdoor cooking gas appliance.
- The LP gas supply cylinder to be used must be:
  - constructed and marked in accordance with the Specification for LP Gas Cylinders of the U.S. Department of Transportation (DOT) or the National Standard of Canada, CAN/CSA-B339, Cylinders, Spheres, and Tubes for Transportation of Dangerous Goods; and Commission.
  - provided with a listed overfilling prevention device.
  - provided with a cylinder connection device compatible with the connection for outdoor cooking gas appliances.
- Always check connections for leaks each time you connect and disconnect the LP gas supply cylinder. See “Installation Instructions” section.
- When the outdoor cooking gas appliance is not in use, the gas must be turned off at the supply cylinder.
- Storage of an outdoor cooking gas appliance indoors is permissible only if the cylinder is disconnected and removed from the outdoor cooking gas appliance.
- Cylinders must be stored outdoors and out of the reach of children and must not be stored in a building, garage, or any other enclosed area.
- The pressure regulator and hose assembly supplied with the outdoor cooking gas appliance must be used. A replacement pressure regulator and hose assembly specific to your model is available from your outdoor cooking gas appliance dealer.
- Gas cylinder must include a collar to protect the cylinder valve.
- For appliances designed to use a CGA791 Connection: Place a dust cap on cylinder valve outlet whenever the cylinder is not in use. Only install the type of dust cap on the cylinder valve outlet that is provided with the cylinder valve. Other types of caps or plugs may result in leakage of propane.

If the following information is not followed exactly, a fire causing death or serious injury may occur.


- Do not store a spare LP gas cylinder under or near this outdoor cooking gas appliance.
- Never fill the cylinder beyond 80 percent full.

**SAVE THESE INSTRUCTIONS**

# UNPACKING INSTRUCTIONS

1. Using a utility knife, cut the tape to open top flaps of carton.
2. Remove Assembly/Installation Instructions and Use and Care Guide.
3. Remove the large cardboard panels on the top and each side of the inside of the carton.
4. Remove the cart base on the top of the inside of the carton.
5. Remove the cart side panels located at the side the grill head assembly.
6. Using a utility knife, vertically cut at the side corners of the carton, lay the box sides flat.
7. Remove foam packaging and plastic wrap from top of grill.
8. Remove the hood locking bottles and open hood and remove parts carton and interior packaging.
9. Remove warming shelf and set aside.
10. Using 2 or more people, remove grill head assembly and set aside.
11. Dispose of/recycle all packaging materials.

## ASSEMBLY REQUIREMENTS

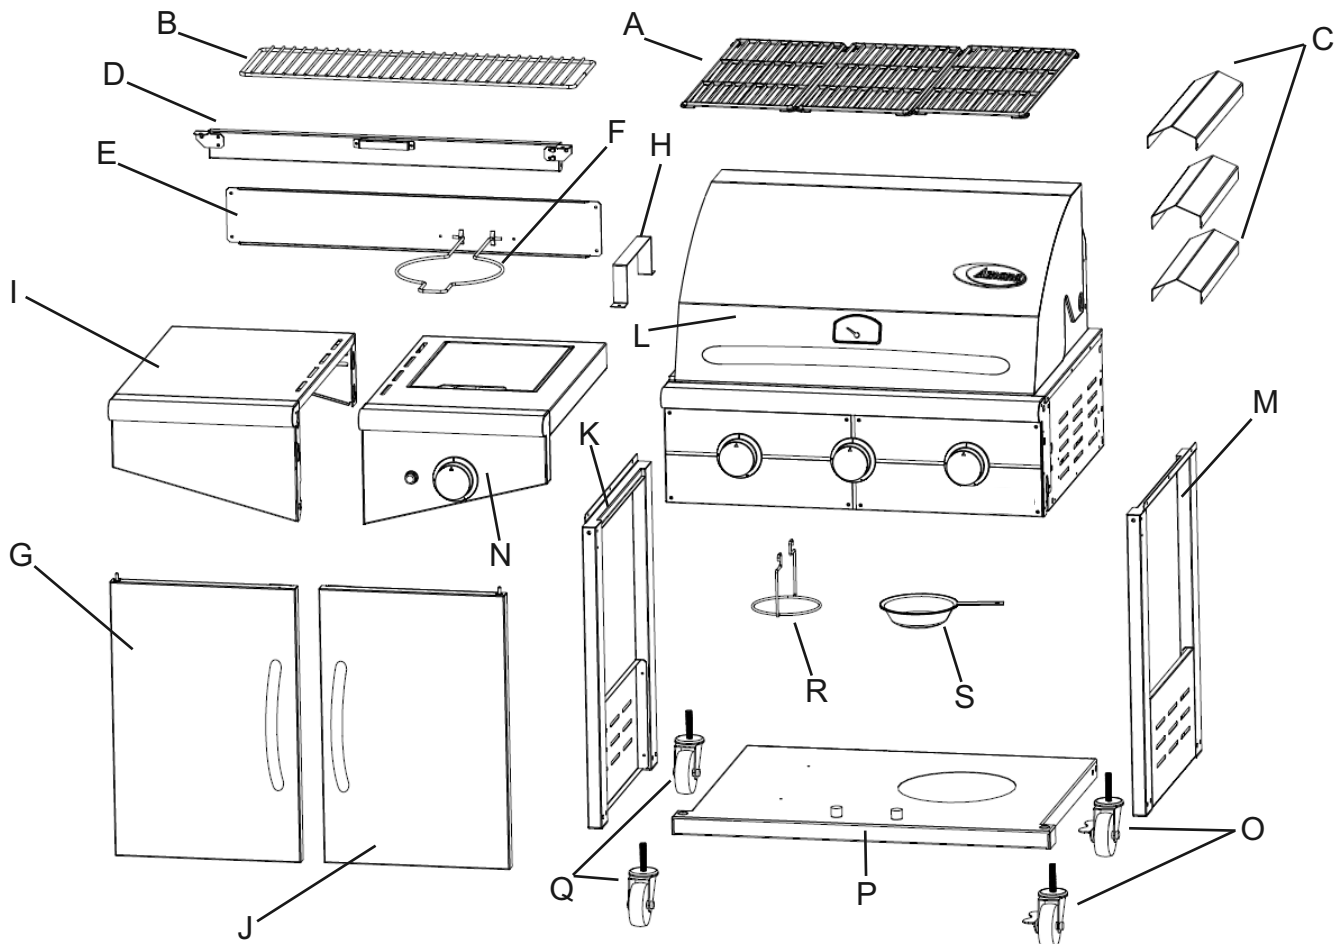

- |                             |                            |
|-----------------------------|----------------------------|
| A. Main cooking grate       | I. Side shelf left         |
| B. Bread warming rack       | J. Cart door right         |
| C. Flavor grid              | K. Cart side left          |
| D. Front top cross bar      | L. Grill head assembly     |
| E. Cart back                | M. Cart side right         |
| F. Cylinder secure ring     | N. Side burner shelf right |
| G. Cart door left           | O. Swivel caster with lock |
| H. Cylinder limiting handle | P. Cart base               |


- |                    |
|--------------------|
| Q. Swivel caster   |
| R. Drip pan holder |
| S. Drip pan        |

**Not shown but included:**  
Small components package

# ASSEMBLY REQUIREMENTS
 
## Assembly Hardware Supplied

- 20 - self-tapping screws



- 2 - sunken head self-tapping screws



- 8 - M6 x 40 Phillips pan head screws



- 1 - Side burner knob with bezel

- 1 - "AA" battery

**NOTE:** Other hardware required is attached to the grill where needed.

## Tools Needed

- #2 Phillips screwdriver
- Adjustable wrench
- 1/2" wrench or socket
- 1/4" nut driver or socket
- Tape measure
- Level
- Non-corrosive leak detection solution


## Parts Supplied

- Gas pressure regulator/hose assembly set for 11" WCP LP gas (attached to manifold).

## Parts Needed

- 20 lb LP gas fuel cylinder

## ASSEMBLED GRILL VIEW

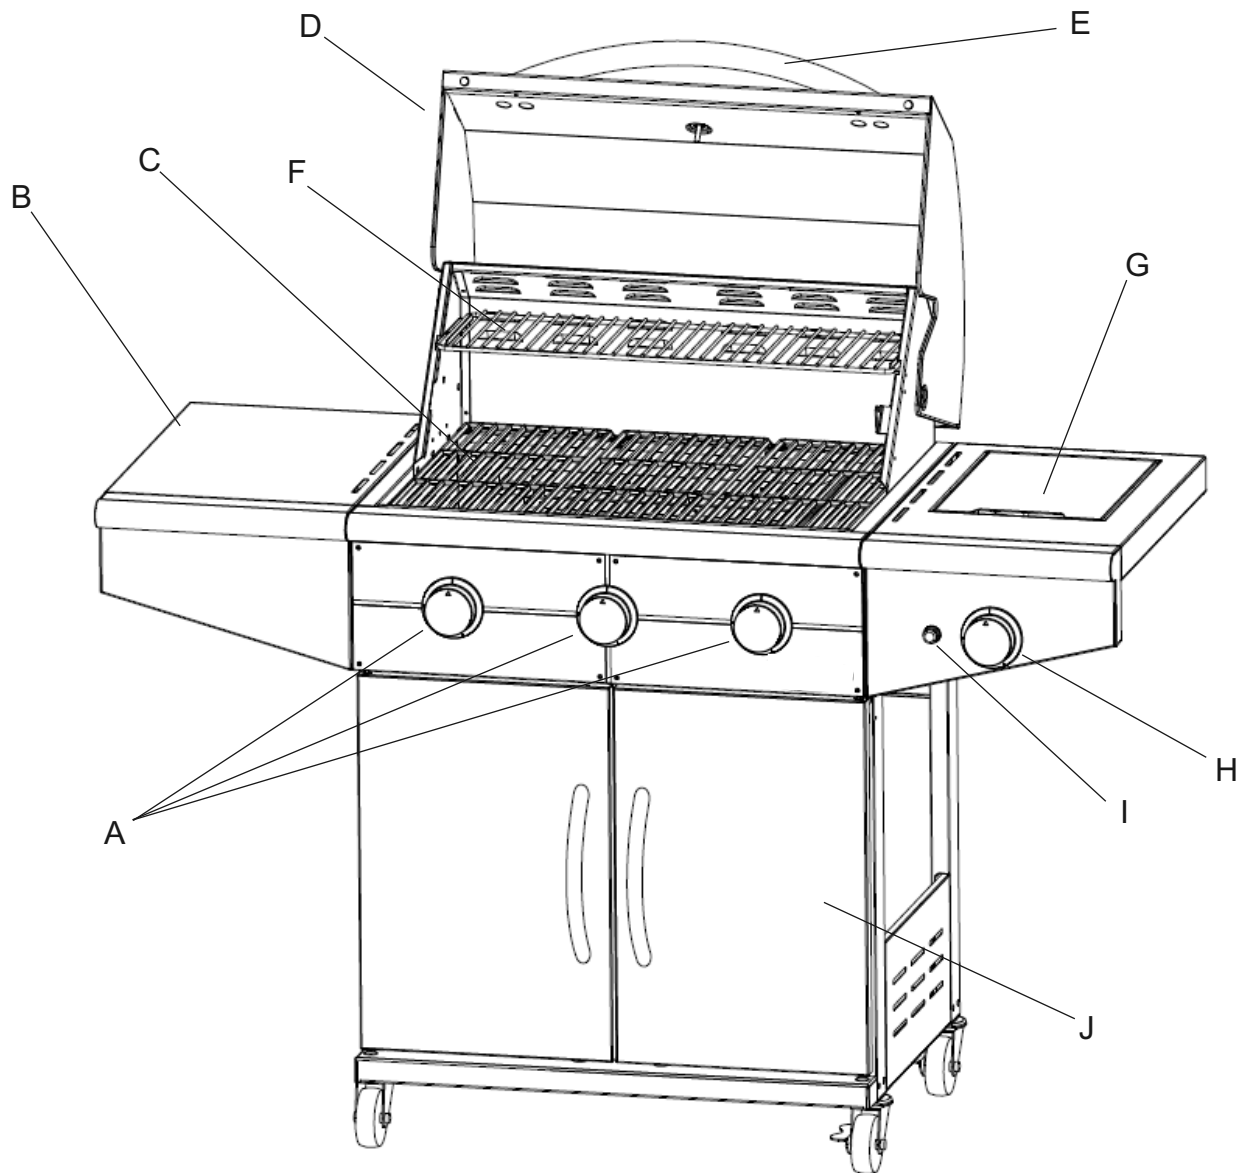

A. Control knob: main burners

B. Side shelf

C. Grilling/cooking surface

D. Roll top grill hood

E. Hood handle

F. Bread warming rack

G. Side burner


H. Control knob: side burner

I. Electronic igniter: main burners and side burner

J. Grill cart with doors

# ASSEMBLY INSTRUCTIONS

## Step 1: Assemble Grill Cart Base

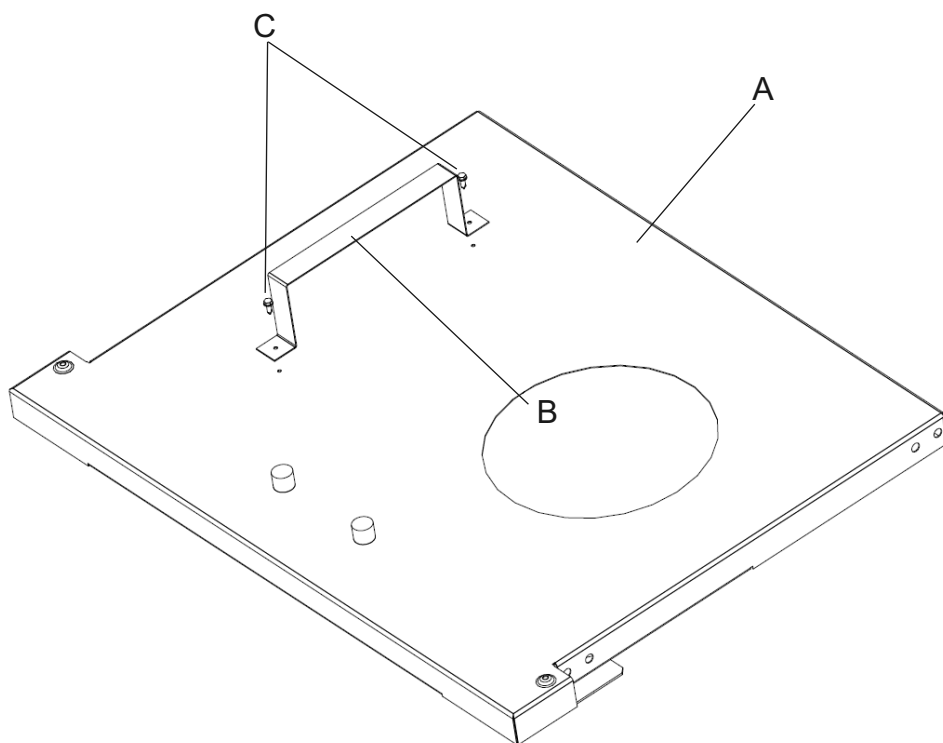


- A. Cart base
- B. Cylinder limit handle
- C. Self tapping screw

1. Use two (2) self-tapping screws to secure the cylinder limit handle on the cart base as shown.

# ASSEMBLY INSTRUCTIONS

## Step 2: Assemble Grill Cart Sides

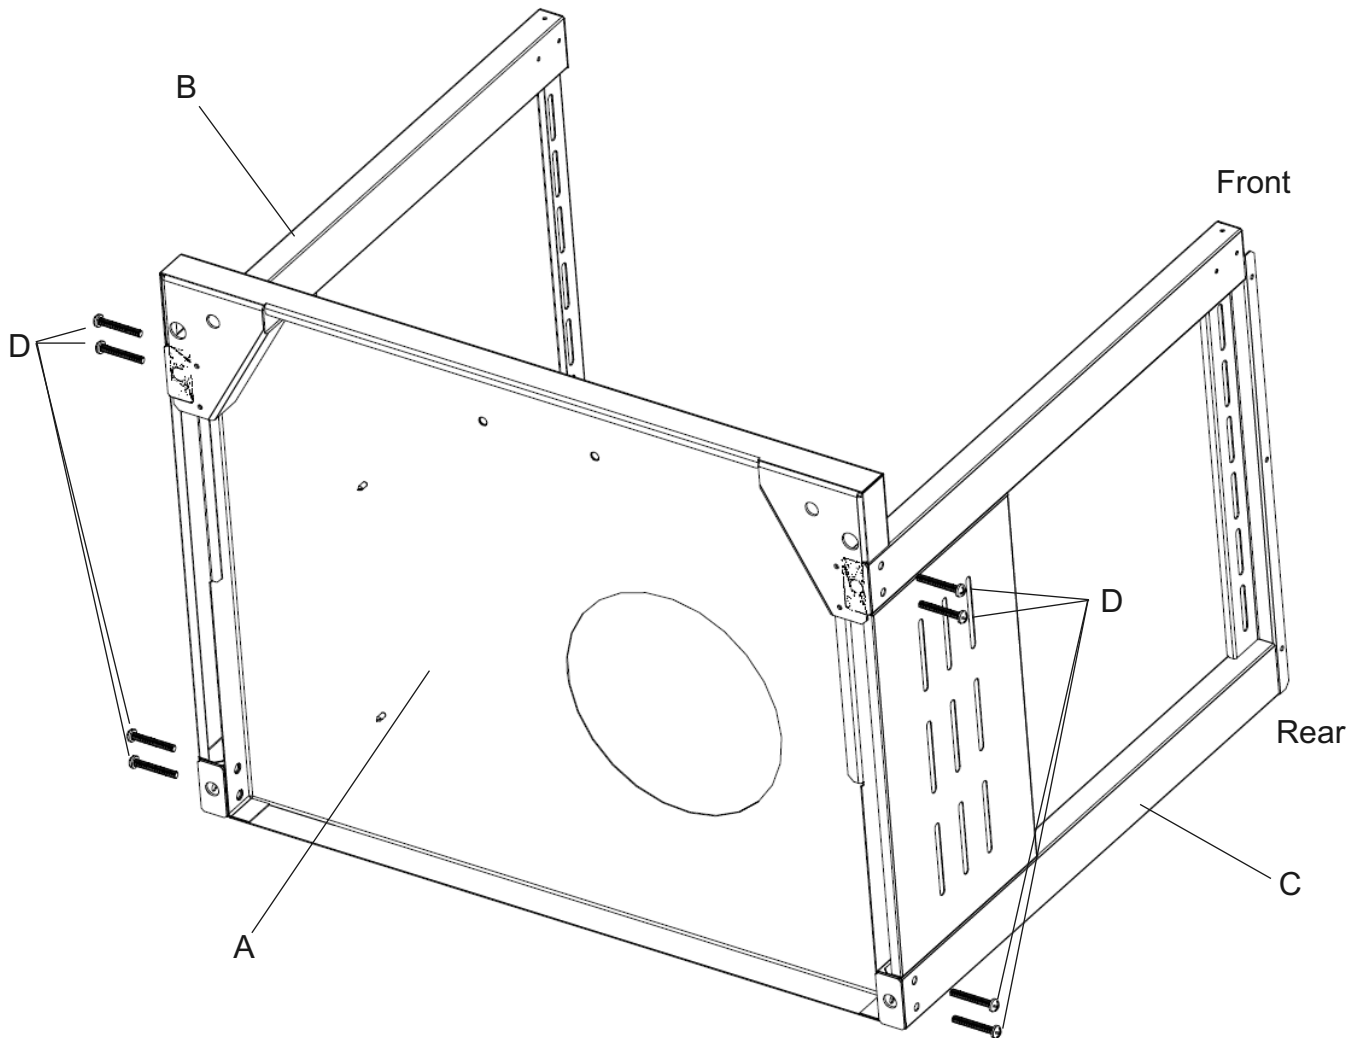


- A. Cart base
- B. Cart side left
- C. Cart side right
- D. Phillips pan head M6 x 40 screw

1. Use four (4) phillips pan head M6 x 40 screws to secure the cart side left to the cart base.
2. Use four (4) phillips pan head M6 x 40 screws to secure the cart side right to the cart base.

**Note: The poles have two holes on the side that should be at the front and the top flange of the cart sides should be on the outside of the cart.**

# ASSEMBLY INSTRUCTIONS

## Step 3: Assemble Casters

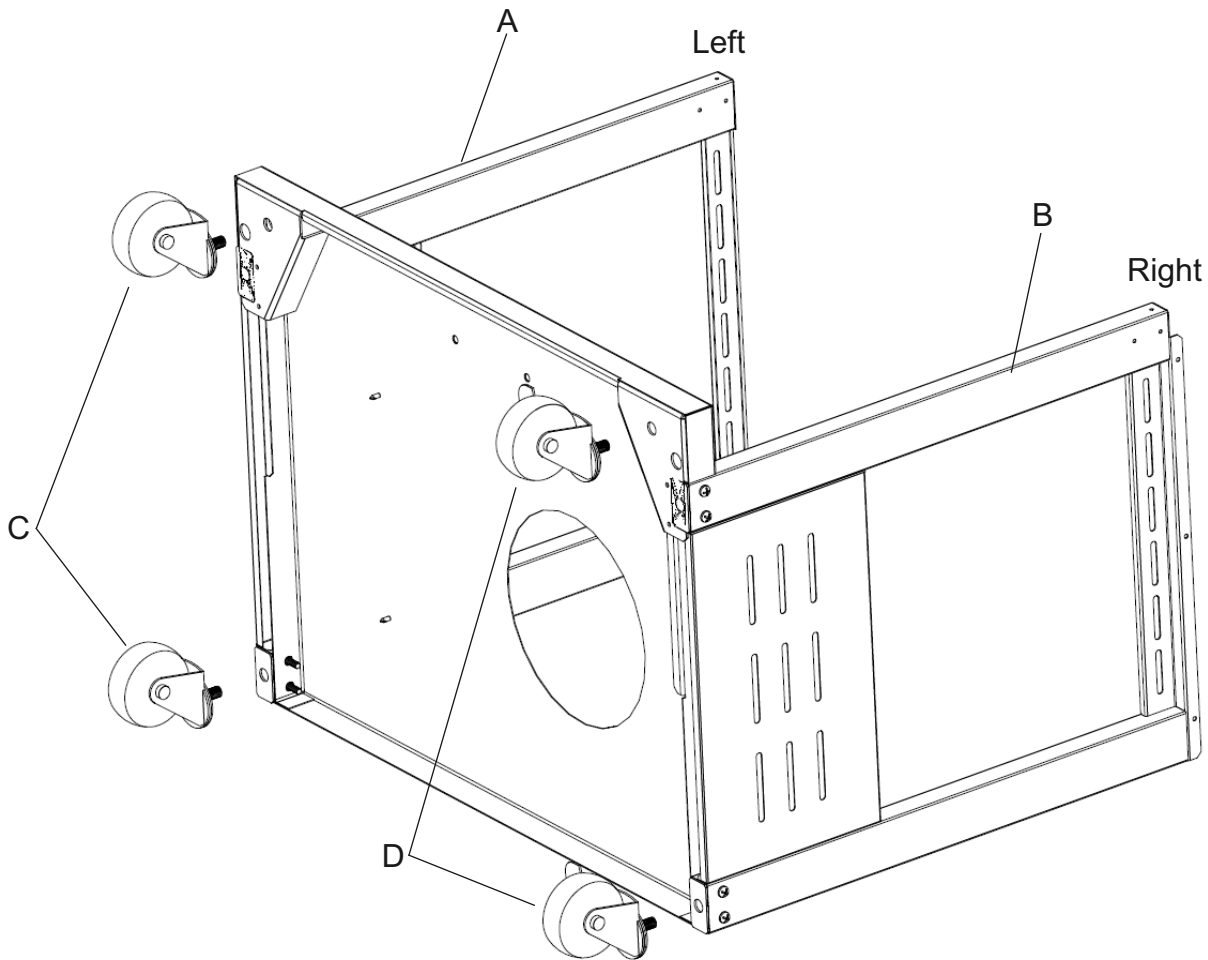


- A. Cart side left
- B. Cart side right
- C. 3" Swivel casters
- D. 3" Swivel casters with brake

1. Hand screw the two swivel casters to the cart side left, then use the supplied wrench to tighten the two swivel casters to the cart side left as shown.
2. Hand screw the two swivel casters with brake to the cart side, then use the supplied wrench to tighten the two swivel casters with brake to the cart side right as shown.

# ASSEMBLY INSTRUCTIONS

## Step 4: Assemble Grill Cart back

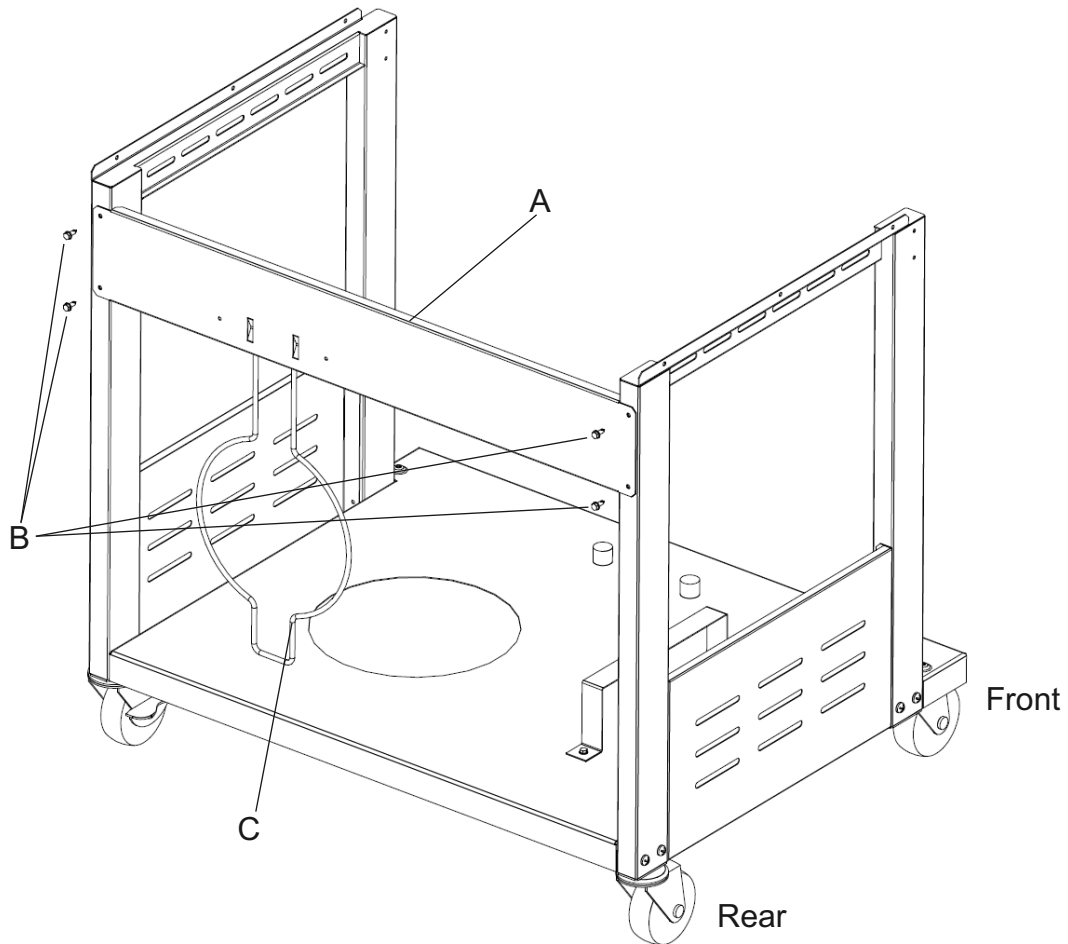


- A. Cart back
- B. Self-tapping screws
- C. Tank secure ring

1. Use four (4) self-tapping screws to secure the grill cart back to the rear of the cart sides as shown.
2. Install the tank secure ring to the cart back.

# ASSEMBLY INSTRUCTIONS

## Step 5: Assemble Cart Front Top Bar

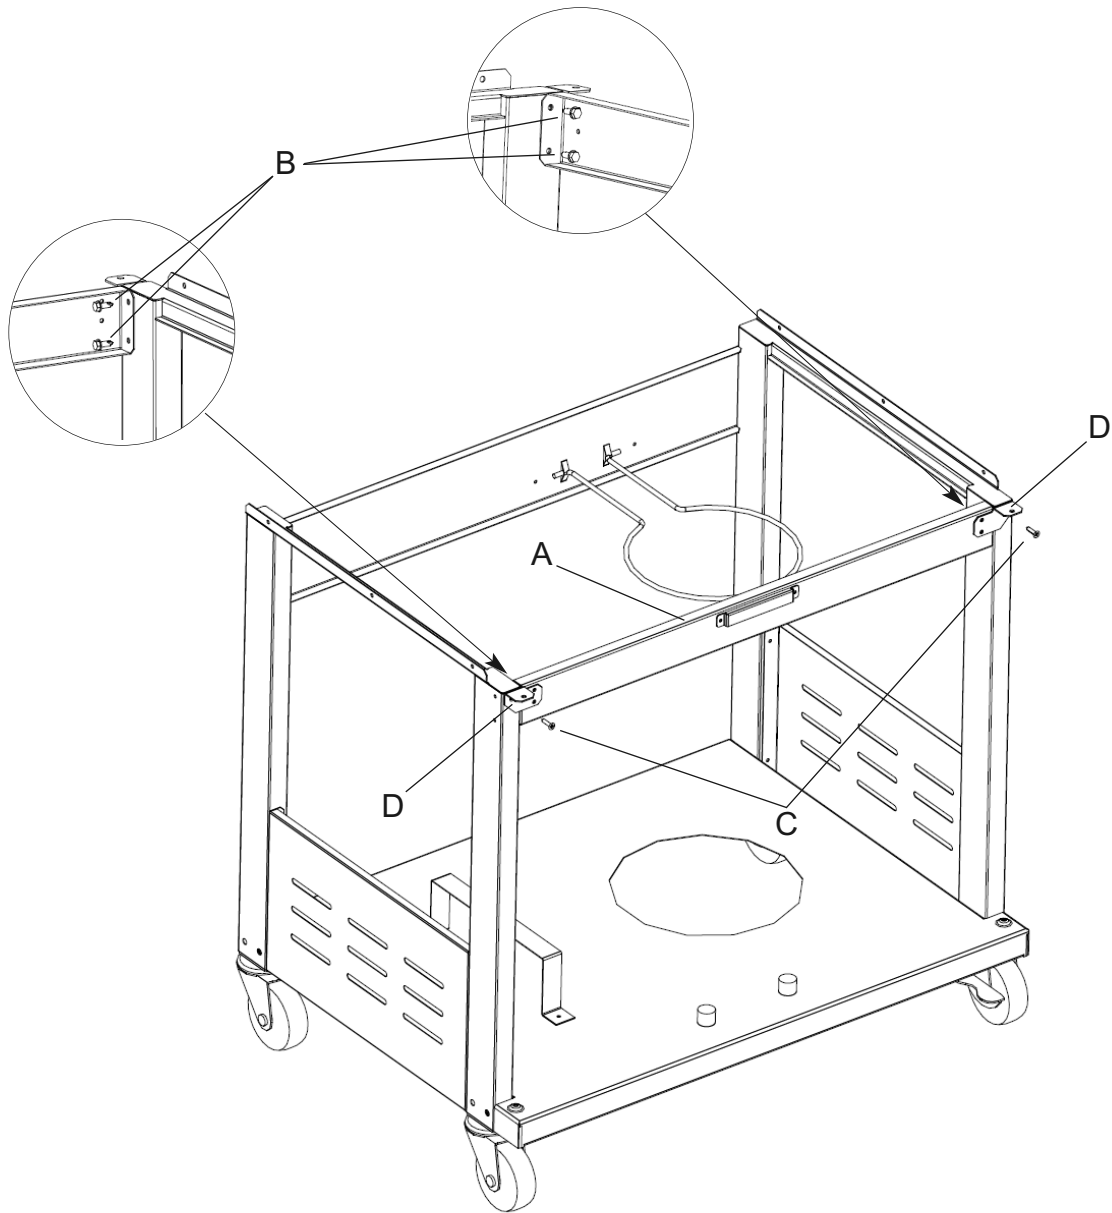


- A. Cart front top bar
- B. Self-tapping screws
- C. Sunken head self tapping screws
- D. Cart door pivot bracket

1. Use four (4) self-tapping screws to secure the cart front top bar onto the cart sides.
2. Use two (2) sunk head screws to secure the cart door pivot brackets in position.

# ASSEMBLY INSTRUCTIONS

## Step 6: Assemble Grill Cart Door

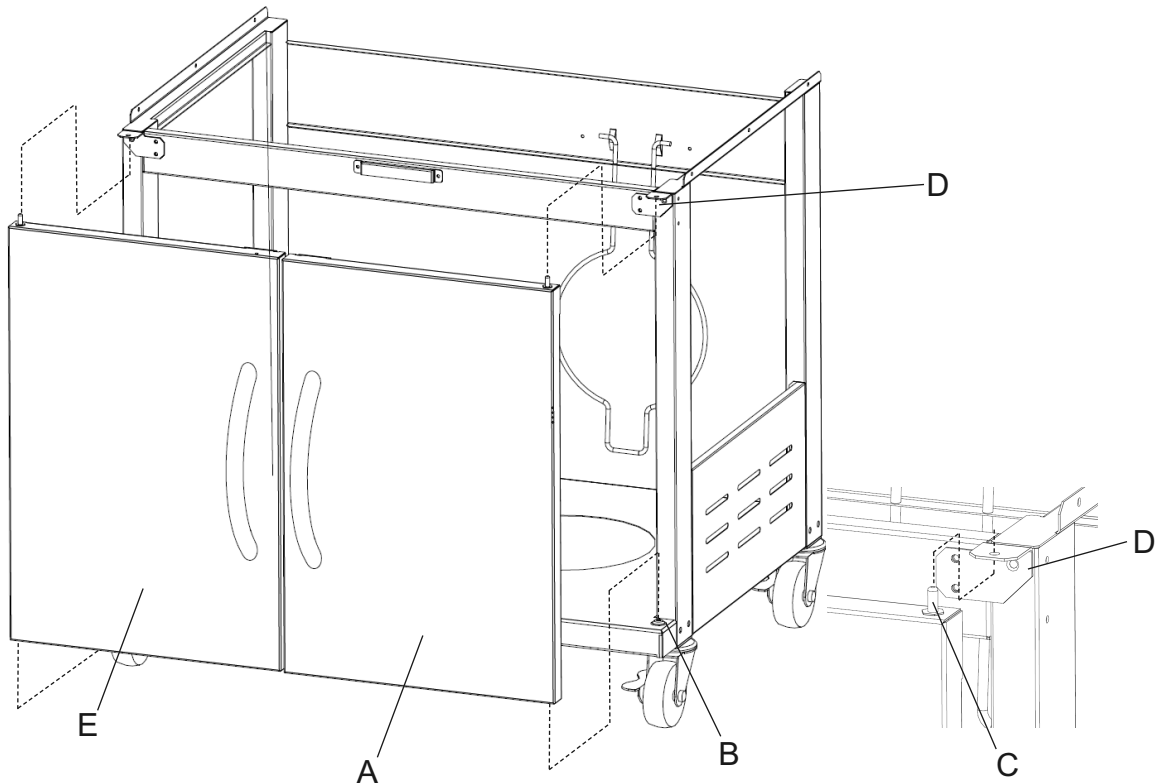


- A. Grill cart door right
- B. Grill cart door pivot
- C. Grill cart door pin
- D. Grill cart door pivot bracket
- E. Cart door Left

1. Remove the two screws on the door handle and use them to install the handle on the cart door left.
2. Repeat step 1 to install the handle on the cart door right.
3. Place cart door right on an angle over the right side door pivot.
4. Tilt the top of the door toward the grill, while depressing the top door pivot pin above the door edge.
5. Move the door slightly until the pin locks into place in the hole on cart door pivot bracket.
6. Repeat steps 3 - 5 for cart door left installation.

# ASSEMBLY INSTRUCTIONS

## Step 7: Assemble Grill Head Assembly

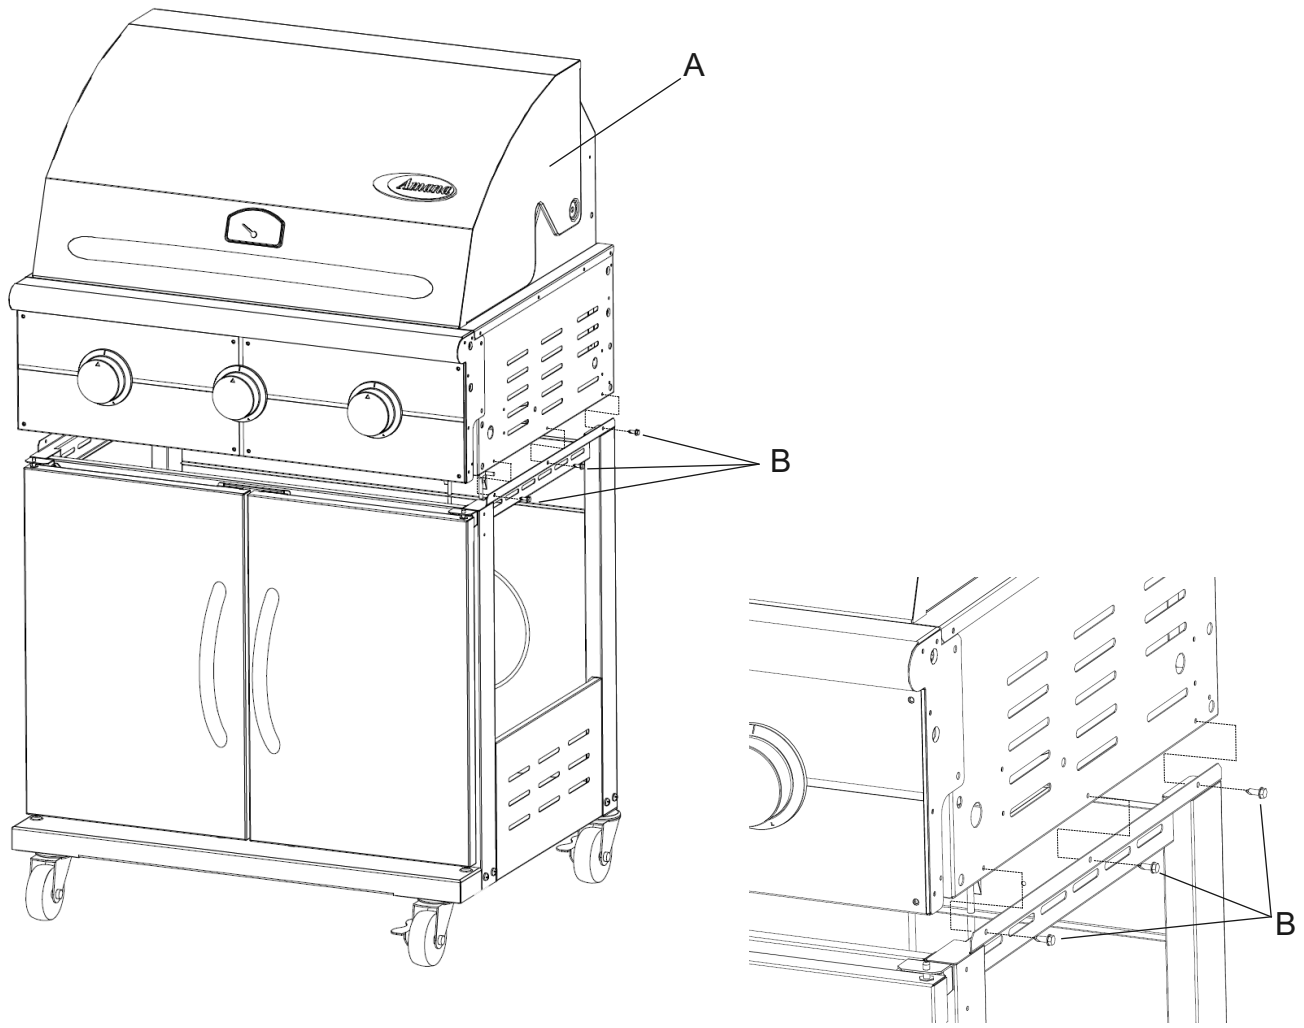


- A. Grill head assembly
- B. Self-tapping Screws

1. Remove the side burner valve/regulator hose assembly from underneath the control panel.
2. Have someone help you pick up the grill head assembly and set it on top of the cart as shown.
2. Use six (6) M5 x 12 Phillips Pan Head Screws to secure the grill head assembly on the top of the cart sides.

# ASSEMBLY INSTRUCTIONS

## Step 8: Assemble Side Shelf Left

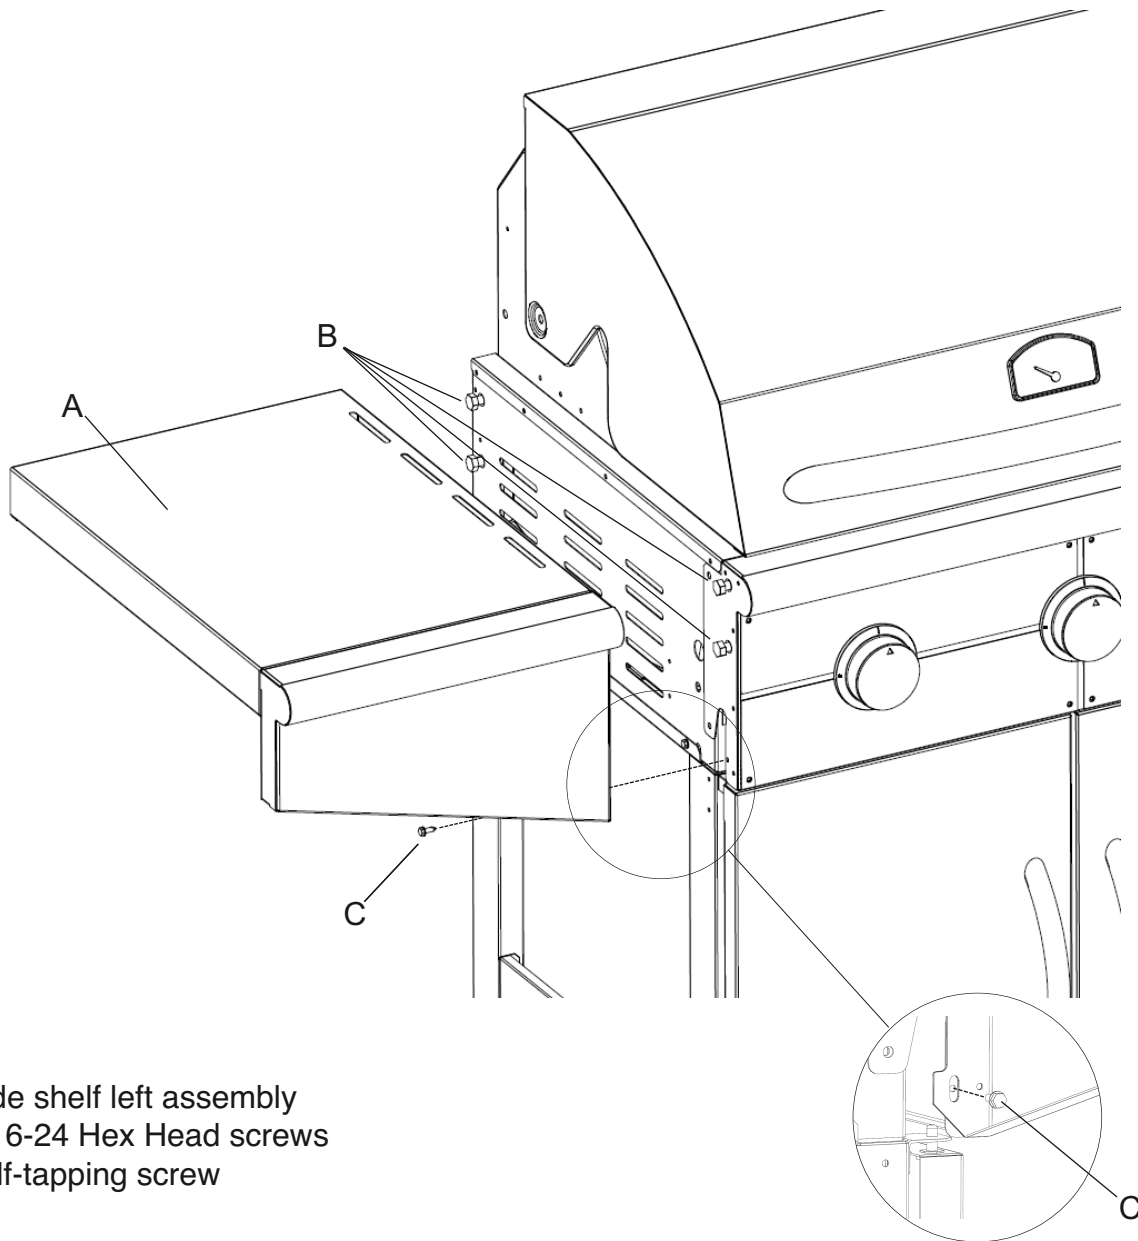


- A. Side shelf left assembly
- B. 5/16-24 Hex Head screws
- C. self-tapping screw

1. Loosen the four (4) 5/16-24 Hex Head screws on the left side of the grill as shown.
2. Attach the left side shelf by inserting the four (4) screws on the side of the grill head into the four (4) key hole slots on the left shelf.
3. Tighten the four (4) screws with a wrench.
4. Install one (1) self-tapping screw into the bottom front slotted hole of the shelf. This will permanently lock the shelf in place.

# ASSEMBLY INSTRUCTIONS

## Step 9: Assemble Side Burner Shelf Right

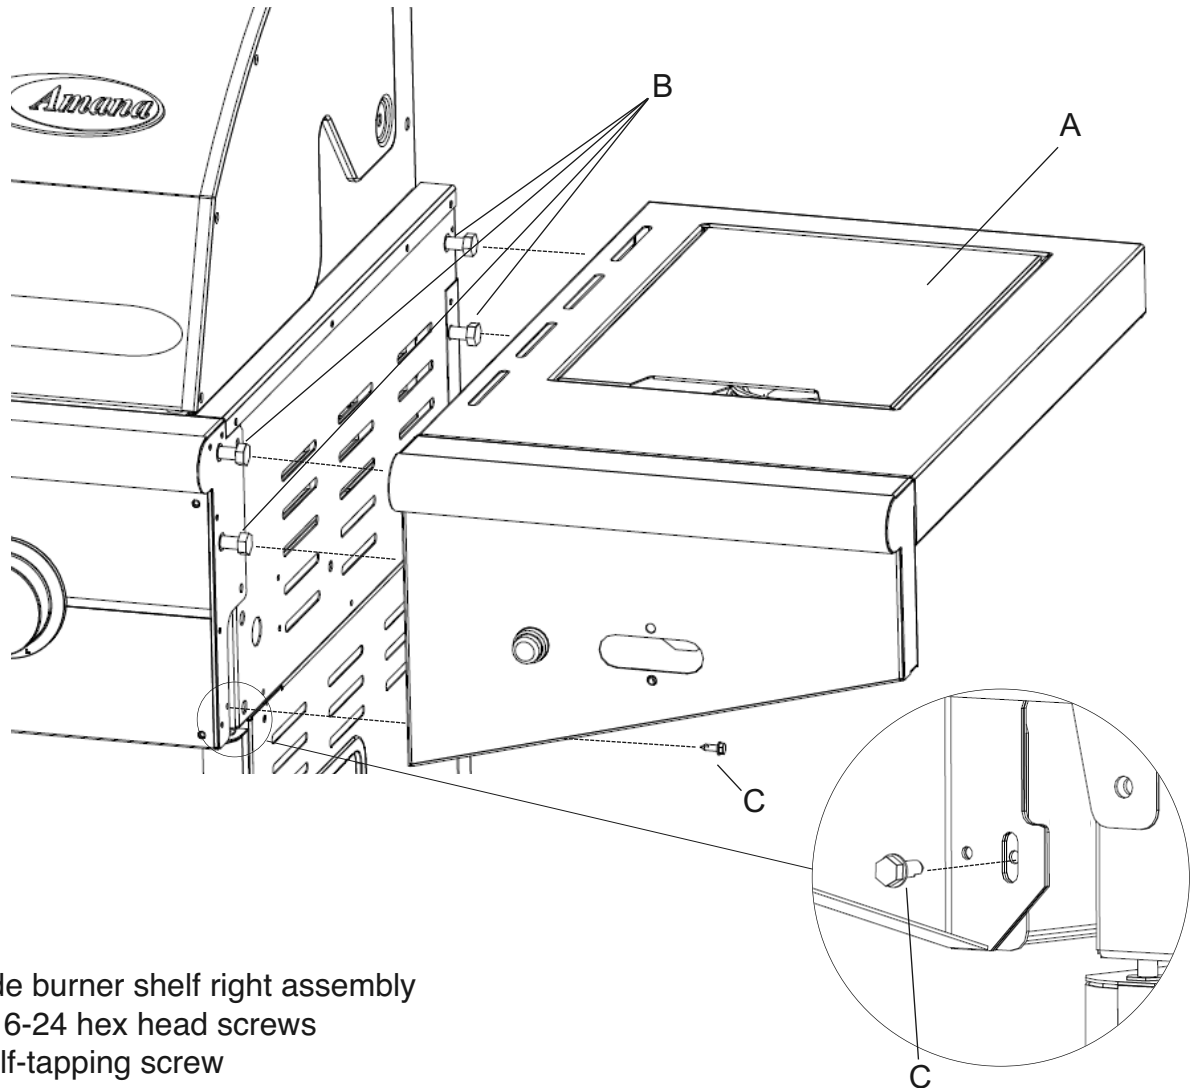


- A. Side burner shelf right assembly
- B. 5/16-24 hex head screws
- C. Self-tapping screw

1. Remove the brass burner cap attached with tape along with side burner grate and set aside.
2. Loosen the four (4) 5/16-24 hex head screws.
3. Attach the side burner shelf by inserting the four (4) screws on the side of the grill head into the four (4) key hole slots on the side burner shelf.
4. Tighten all four (4) screws to secure the side burner shelf.
5. Install one (1) self-tapping screw into the bottom front slotted hole of the side burner shelf.

# ASSEMBLY INSTRUCTIONS

## Step 10: Assemble the Side Valve

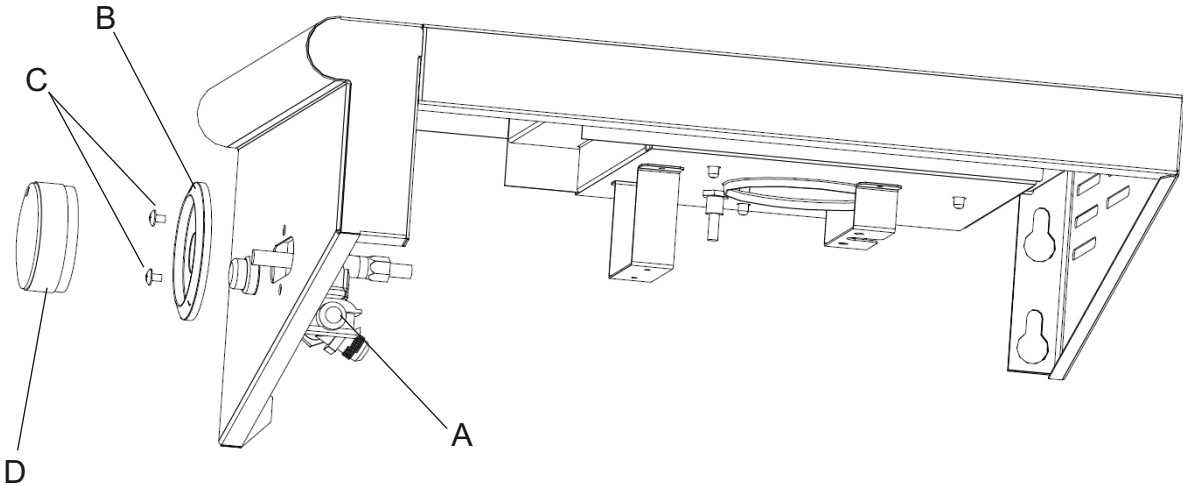


- A. Side burner valve assembly
- B. Large bezel
- C. Phillips pan head screw
- D. Control knob

1. Using a Phillips screwdriver, remove the 2 screws from the side burner valve assembly.
2. Push the valve stem out through the opening in the front of the side burner shelf, lining up the threaded holes in the side burner valve assembly with the openings on the side burner shelf.
3. Position the side burner bezel (C) into place, with the OFF position pointing up, making sure to line up the holes.
4. Attach side burner bezel to side burner assembly face with screws removed in step 1.
5. Press knob onto valve assembly stem with OFF position pointing up..

# ASSEMBLY INSTRUCTIONS

## **Step 11: Assemble the Side Burner Casting**

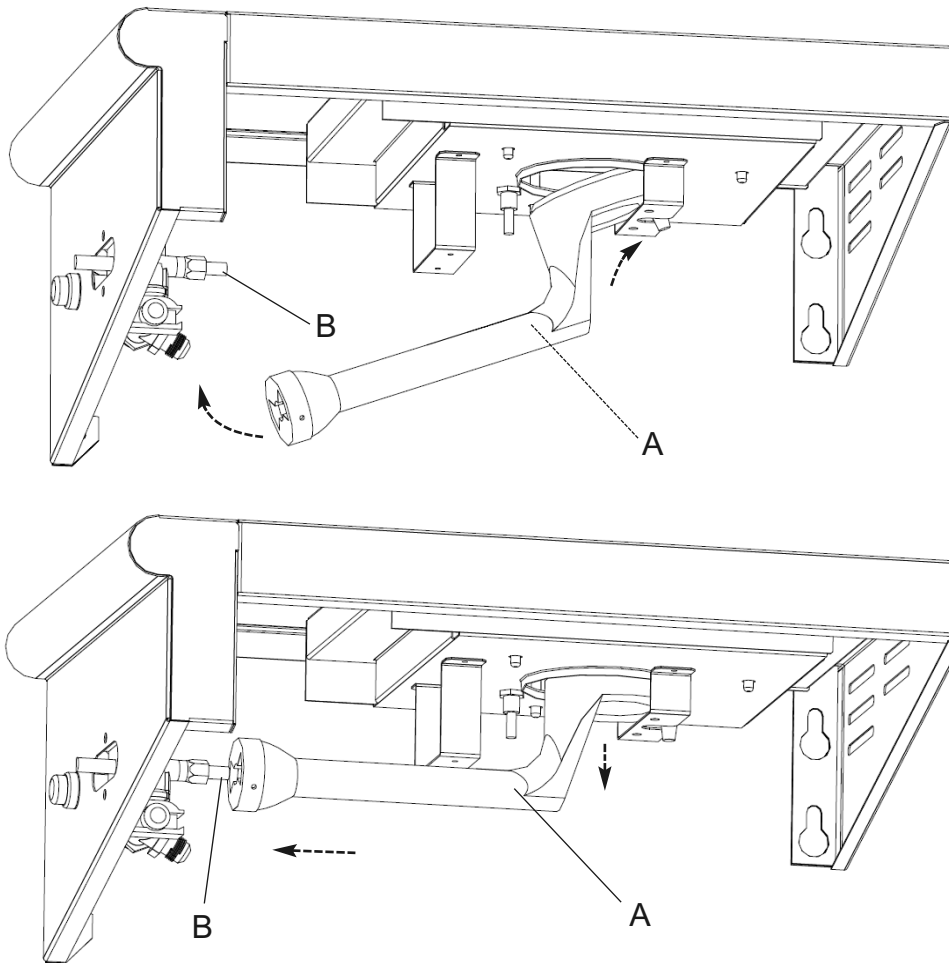


- A. Side burner casting
- B. Side burner valve orifice

1. Remove the two phillips pan head screws from the side burner casting.
2. Angle the side burner casting and insert it into the center hole on the side burner tray.
3. Slide the side burner casting back in position to get the side burner valve orifice into the side burner casting.

# ASSEMBLY INSTRUCTIONS

## **Step 12: Assemble the Side Burner Bracket**

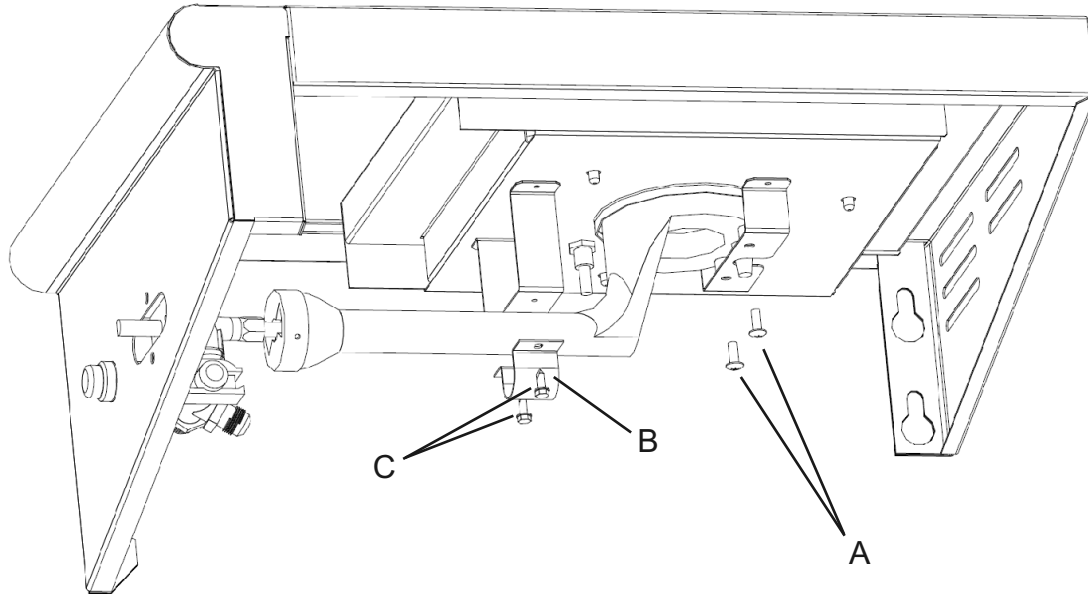


- A. Phillips pan head screw
- B. Small bracket
- C. Self tapping screws

1. Use the two (2) screws removed in step 1 on page 18 to secure the head of side burner casting on the rear bracket.
2. Use the two (2) self-tapping screws to attach the small bracket to the front bracket under the side burner tray.

# ASSEMBLY INSTRUCTIONS

## Step 13: Assemble Igniter Module

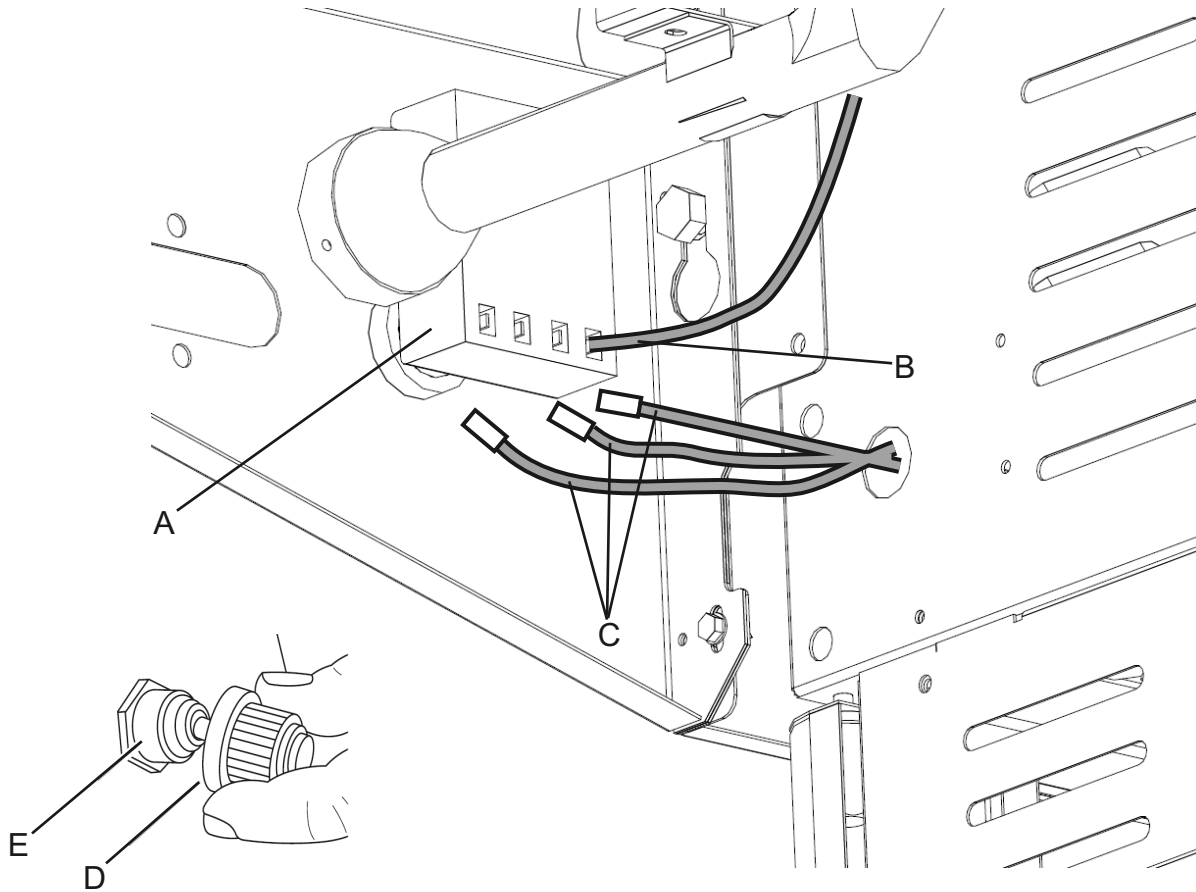


- A. Igniter module
- B. Side burner igniter wire
- C. Main burner igniter wires
- D. Igniter push button
- E. "AA" size battery

1. Unscrew the igniter button cap from the igniter module.
2. Install battery into battery compartment, negative (-) end in first.
3. Screw igniter push button cap on.
4. Connect loose igniter wires from the grill to the open terminals of the igniter.

**Note: The igniter is designed in such a way that it does not matter which terminal tab is used when connecting igniter wires.**

# ASSEMBLY INSTRUCTIONS

## **Step 14: Assemble the Side Burner Accessories**

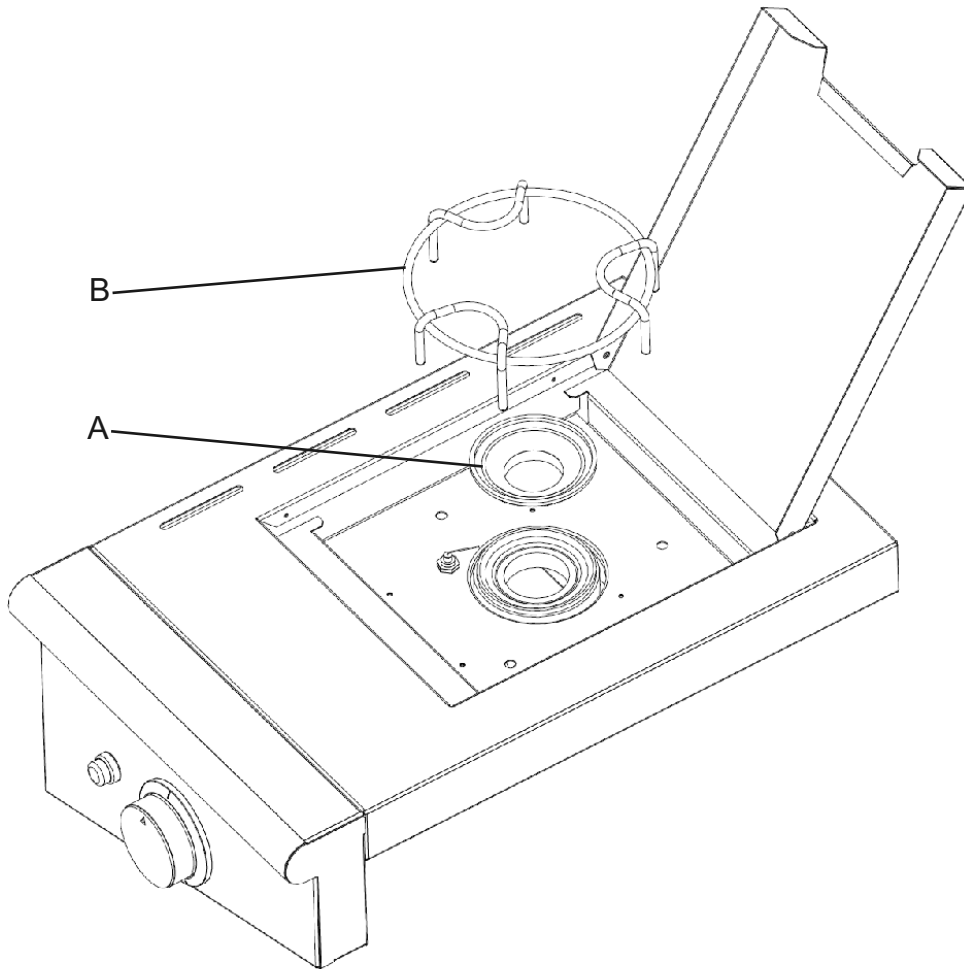


- A. Brass burner cap
- B. Side burner grate

1. Center the brass burner cap on top of the side burner head.
2. Place the side burner grate onto the side burner tray. Position the 3 longer legs of the grate into the holes around the side burner.

# ASSEMBLY INSTRUCTIONS

## Step 15: Assemble the Drip Pan

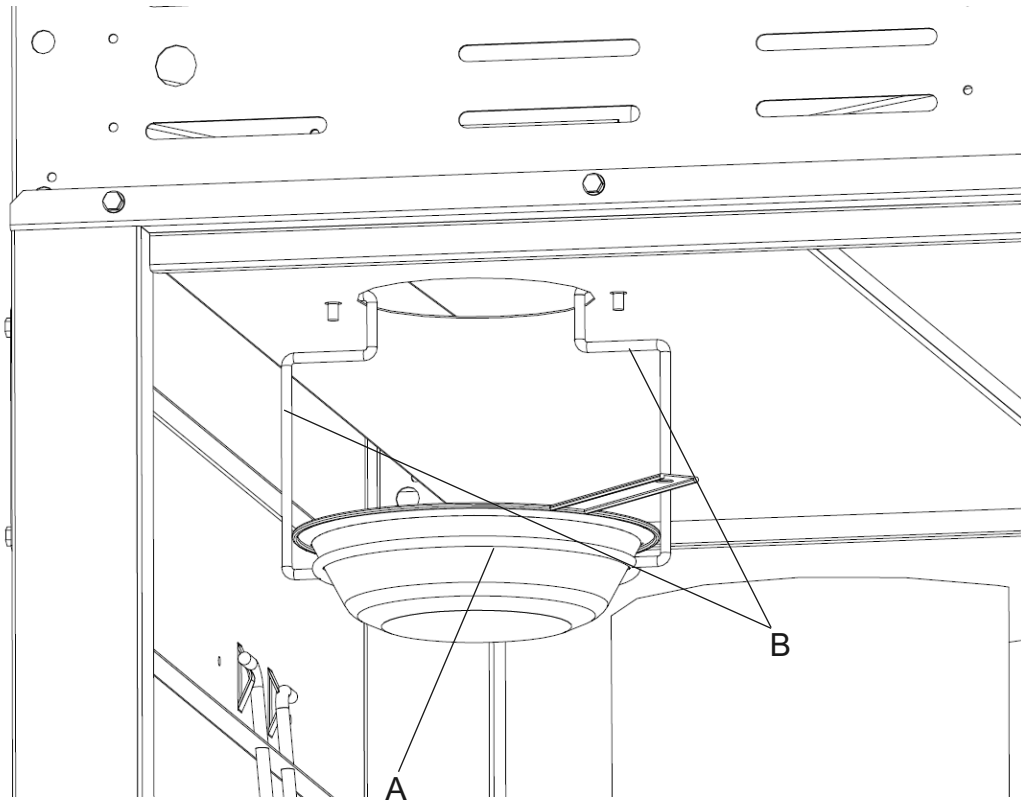


- A. Drip pan
- B. Drip pan holder

1. Place the drip pan holder on the grill head bottom.
2. Place the drip pan into the drip pan holder.

# ASSEMBLY INSTRUCTIONS

## Step 16: Complete the grill assembly

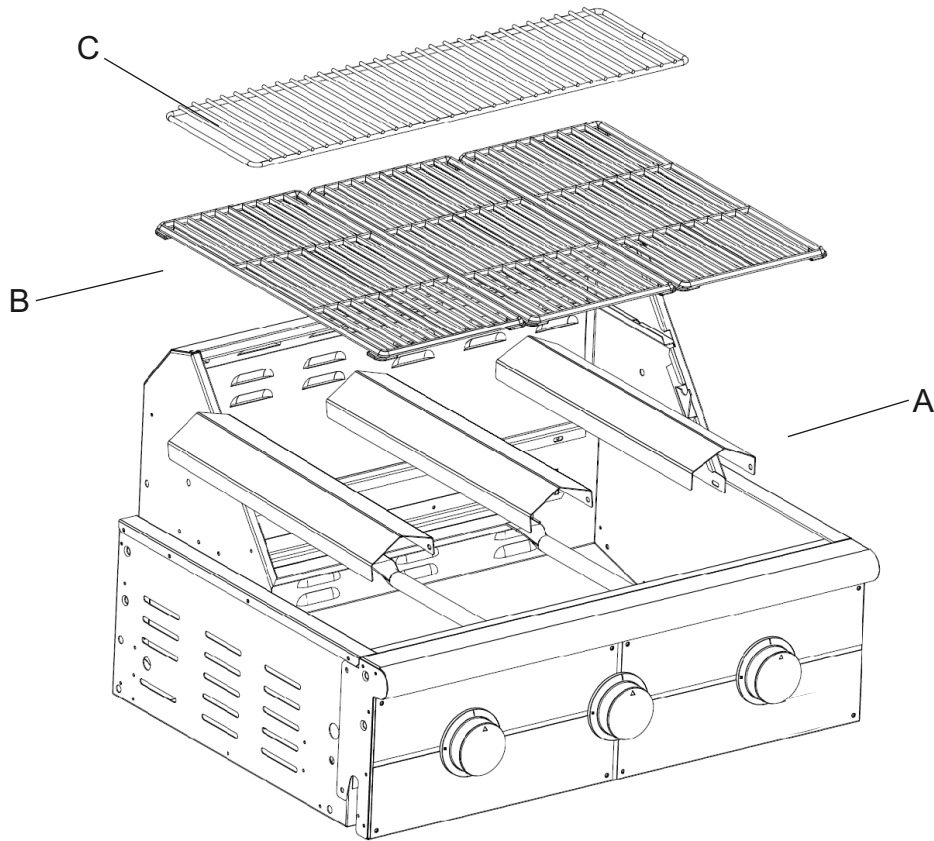


- A. Flavor grids
- B. Main cooking grates
- C. Bread warming rack

1. Insert the flavor grids into the cutouts with triangle ridges facing up.
2. Install main cooking grates on the ledges provided on the grill to create the cooking surface.
3. Rest bread warming rack on the two brackets through the cutouts on the hood support sides.

# INSTALLATION REQUIREMENTS

## Location Requirements

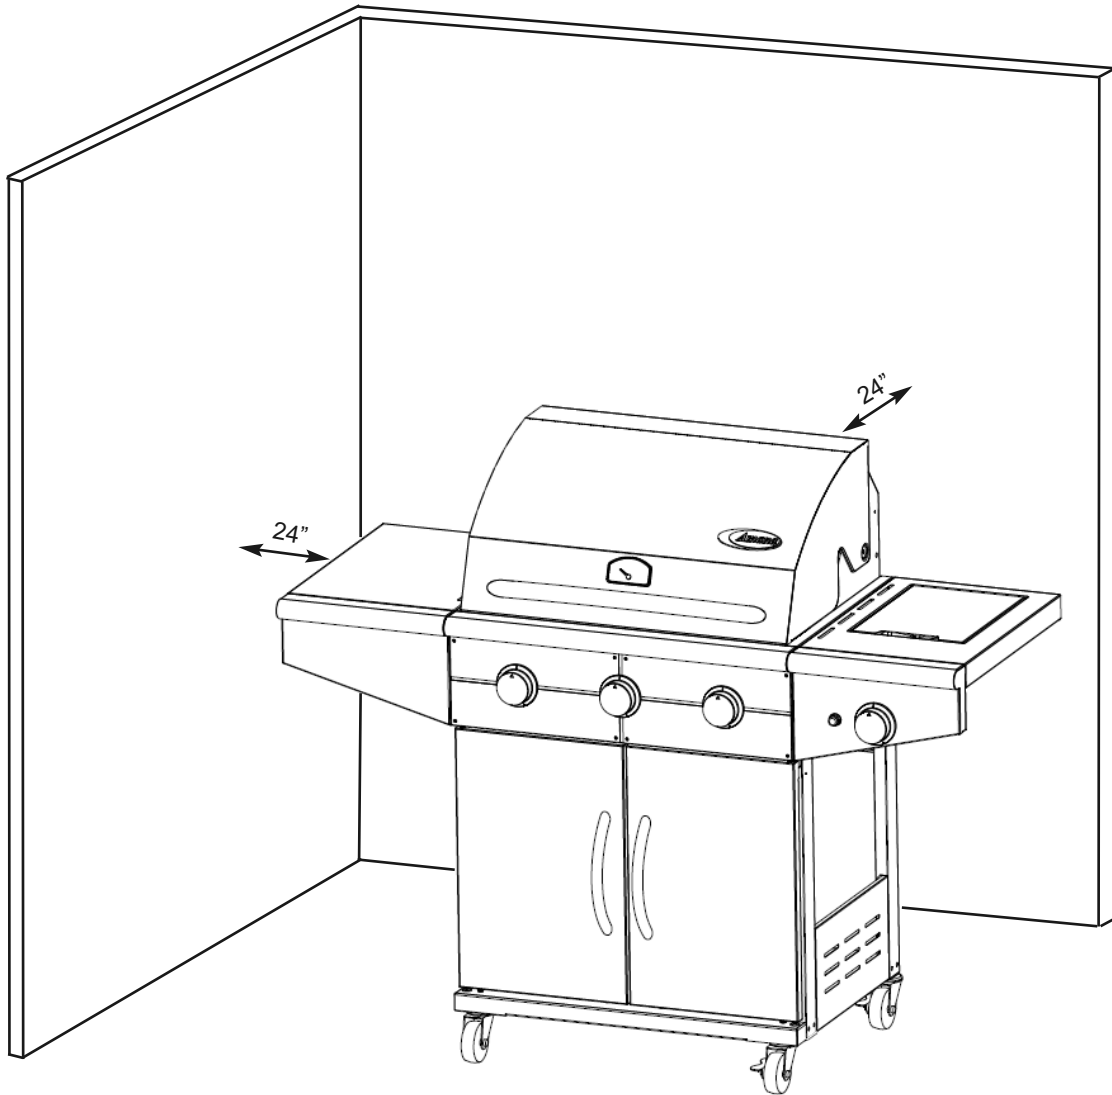

Select a location that provides minimum exposure to wind and traffic paths. The location should be away from strong draft areas.



Do not obstruct flow of combustion and ventilation air.

Clearance to combustible construction:

- A minimum of 24" (61 cm) from grill hood sides and grill back must be maintained from any combustible construction.

# INSTALLATION REQUIREMENTS

## Product Dimensions

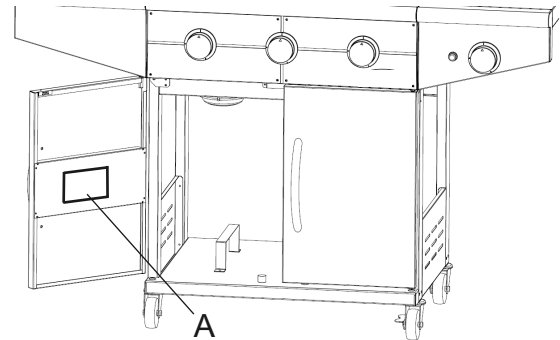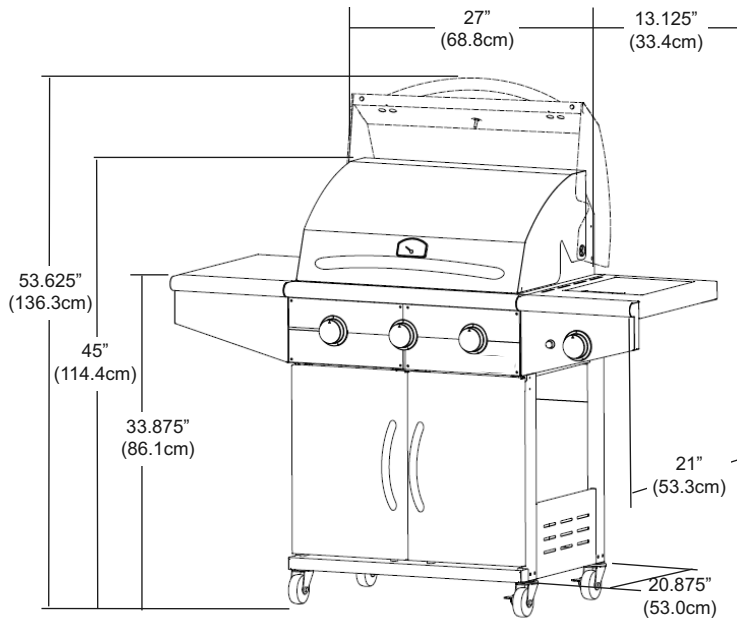

A. Model/serial number plate

## Gas Supply Requirements

Observe all governing codes and ordinances.

**IMPORTANT:** This installation must conform with all local codes and ordinances. In the absence of local codes, installation must conform with American National Standards Institute, National Fuel Gas Code ANSI Z223.1 - latest edition or CAN/CGA B149.1 - latest edition.

**IMPORTANT:** Grill must be connected to a regulated gas supply. Refer to the model/serial rating plate for information on the type of gas that can be used. If this information does not agree with the type of gas available, check with your local gas supplier.

The model/serial number rating plate is located inside the left door of the grill cabinet. See the top illustration.

## Gas Pressure Regulator

The gas pressure regulator supplied with this grill must be used. The inlet (supply) pressure to the regulator should be as follows for proper operation:

### **LP Gas:**

Operating pressure: 11" (27.9 cm) WCP

Inlet (supply) pressure: 11" to 14" (27.9 cm to 35.5 cm) WCP Contact local gas supplier if you are not sure about the inlet (supply) pressure.

## Burner Requirements for High Altitude

Input ratings shown on the model/serial rating plate are for elevations up to 2,000 ft (609.6 m).

For elevations above 2,000 ft (609.6 m), ratings are reduced at a rate of 4% for each 1,000 ft (304.8 m) above sea level. Orifice conversion is required. See "Assistance or Service" section to order.

# INSTALLATION REQUIREMENTS

## Gas Supply Line Pressure Testing

### **Testing above ½ psi (3.5 kPa) or 14" (35.5 cm) WCP (gauge):**

The grill and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures greater than ½ psig (3.5 kPa).

### **Testing below ½ psi (3.5 kPa) or 14" (35.5 cm) WCP (gauge) or lower:**

The grill must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than ½ psig (3.5 kPa).

# INSTALLATION INSTRUCTIONS

## 20 lb LP Gas Fuel Cylinder

This grill is equipped for use with a 20 lb LP gas fuel cylinder (fuel cylinder not supplied). A gas pressure regulator/hose assembly is supplied.

It is also design-certified by CSA International for local LP gas supply. The 20 lb LP gas fuel cylinder must be mounted and secured.

Set 20 lb LP gas fuel cylinder in hole in the cart base. Use the cylinder secure ring to secure the cylinder in position.

## Make Gas Connection



### **LP Gas:**

**IMPORTANT:** A 20 lb LP gas fuel cylinder must be purchased separately.

**IMPORTANT:** The gas pressure regulator/hose assembly supplied with the grill must be used. Replacement gas pressure regulator/hose assembly specific to your model, is available from your outdoor grill dealer.

### **To Install the 20 lb LP Gas Fuel Cylinder:**

1. Set cylinder in hole in the cart base.
2. Screw the gas pressure regulator/hose assembly on to the 20 lb LP gas fuel cylinder as shown.
3. Place the cylinder secure ring over the cylinder collar as shown.
4. Turn on the gas supply. Wait a few minutes for gas to move through the gas line.
5. Test all connections by brushing on an approved non-corrosive leak-detection solution. Bubbles will show a leak. Correct any leak found.

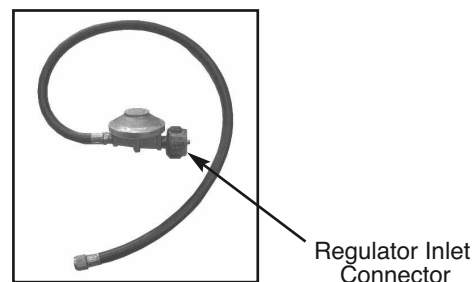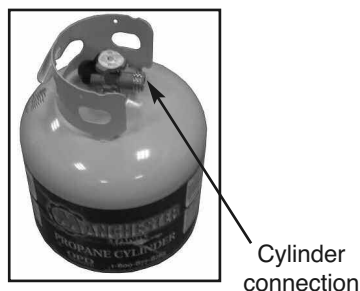

# INSTALLATION INSTRUCTIONS

## Check the burners

The burners are tested and factory-set for most efficient operation. However, variations in gas supply and other conditions may make minor adjustments to air shutter or low flame setting necessary.


It is recommended that a qualified person make burner adjustments.

Checking the grill burner flames requires removing the grate and flavor grids.

## Burner Flame Characteristics


The flames of the grill burners and side burner should be blue and stable with no excessive noise or lifting (LP gas flames will have a slightly yellow tip). A yellow flame indicates not enough air. If flame is noisy or lifts away from the burner, there is too much air. Some yellow tips on flames when the burner is set to HI setting are acceptable as long as no carbon or soot deposits appear.

Check that burners are not blocked by dirt, debris, insect nests, etc. and clean as necessary.

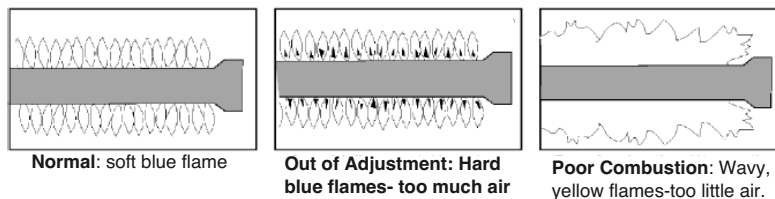

# OUTDOOR GRILL USE

## Control Panel

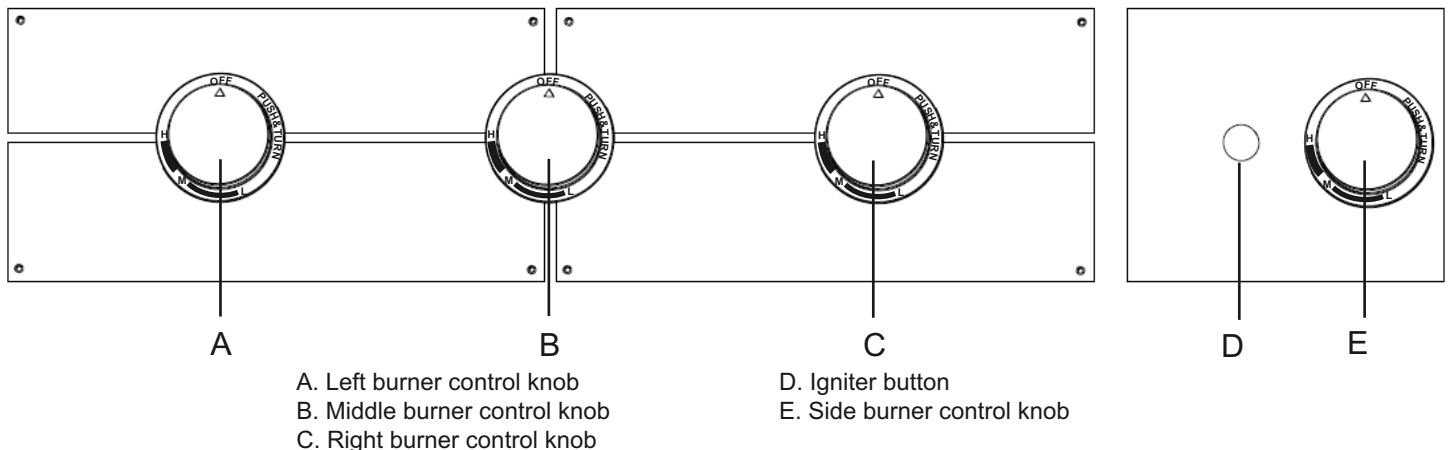

## Using Your Outdoor Grill

### Inspect the LP Gas Fuel Cylinder Supply Hose

Inspect the gas pressure regulator/hose assembly before each use.

1. Inspect the gas pressure regulator/hose assembly for cuts, abrasions, or excessive wear.
2. If necessary, replace the gas pressure regulator/hose assembly before using the grill.

Contact the dealer and use only replacement hoses specified for use with the grill.

### Prepare the Gas Supply

1. Open the hood completely. Do not light burners with the hood closed.
2. Make sure control knobs are turned to OFF.


### Turn the Gas Supply On

For outdoor grills using a 20 lb LP gas fuel cylinder: Slowly open the cylinder valve.

**NOTE:** If flow limiting device activates, your grill may not light. If your grill does light, the flames will be low and will not heat properly. Turn cylinder valve and all control knobs off and wait 30 seconds. After shutting off the cylinder, very slowly open cylinder valve and wait 5 seconds before lighting.

### Lighting the Grill

1. Do not lean over the grill.
2. Push in and turn the main burner control knob to HIGH, and immediately press the electronic igniter button.

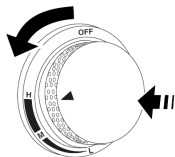

3. You will hear the “snapping” sound of the spark igniter. When burner is lit, release the knob. Turn knob to desired setting.


**IMPORTANT:** If burner does not light immediately, turn the burner knob to OFF and wait 5 minutes before relighting.

# OUTDOOR GRILL USE

## Using Your Outdoor Grill (cont.)

### **Manually Lighting Grill**

1. Do not lean over the grill.
2. Remove the manual lighting extension and attach a match to the split ring.
3. Strike the match to light it.
4. Guide the lit match between the grill grate and one of the slots in the flavor grid.
5. Push in and turn the main burner knob to HIGH. The burner will light immediately. When burner is lit, turn knob to desired setting.

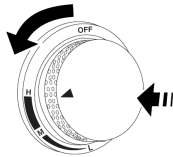

6. Remove match and replace manual lighting extension.

**IMPORTANT:** If burner does not light immediately, turn the burner knob to OFF and wait 5 minutes before relighting.

If any burners do not light after attempting to light them manually, contact customer service. See the “Assistance or Service” section.

## Using Your Side Burner

### **Lighting the Side Burner**

1. Open the side burner cover. Do not light burners with the cover on.
2. Do not lean over the grill.
3. Push in and turn the control knob to HIGH and immediately press the electronic igniter button.
4. You will hear the “snapping” sound of the spark igniter. When burner is lit, release the knob. Turn knob to desired setting.

### **IMPORTANT:**

If burner does not light immediately, turn the burner knob to OFF and wait 5 minutes before relighting.

### **Manually Lighting the Side Burner**

1. Do not lean over the grill.
2. Remove the manual lighting extension and attach a match to the split ring.
3. Strike the match to light it.
4. Guide the match to the burner.
5. Push in and turn the burner knob to HIGH. The burner will light immediately. When burner is lit, turn knob to desired setting.
6. Remove match and replace manual lighting extension.

### **IMPORTANT:**

If burner does not light immediately, turn the burner knob to OFF and wait 5 minutes before relighting.

If any burners do not light after attempting to light them manually, contact customer service. See the “Assistance or Service” section.

# **TIPS FOR OUTDOOR GRILLING**

## **Before Grilling**

- Thaw food items before grilling.
- Lightly oil the grill grates or the food when cooking low-fat cuts of meat, fish or poultry, such as lean hamburger patties, shrimp or skinless chicken breasts.
- Using too much oil can cause gray ash to deposit on food.
- Trim excess fat from meats prior to cooking to reduce flare-ups.
- Make vertical cuts at 2" (5 cm) intervals around the fat edge of meat to avoid curling.
- Add seasoning or salt only after the cooking is finished.

## **During Grilling**

- Turn foods only once. Juices are lost when meat is turned several times.
- Turn meat just when juices begin to appear on the surface.
- Avoid puncturing or cutting the meats to test doneness. This allows juices to escape.
- It may be necessary to lower the heat setting for foods that cook a long time or are marinated or basted in a sugary sauce.
- If using a high flame, add barbecue sauce only during the last 10 minutes of cooking to avoid burning the sauce.
- The degree of doneness is influenced by the type of meat, cut of meat (size, shape and thickness), heat setting selected, and length of time on the grill.
- Preheat grill on high (use all grill burners) 10 minutes. The hood must be closed during preheating. Preheating provides the high heat needed to brown and seal the juices.
- Shorten the preheat time when grilling high-fat cuts of meat or poultry, such as chicken thighs. This will help reduce flare-ups.
- Cooking time will be longer with an open grill cover.

## **Cooking Methods**

### **Direct Heat**

Cooking by direct heat means the food is placed on grill grates directly above lighted burners. Hood position can be up or down. If hood is in the "up" position, total cooking times may be longer.

Direct heat sears the food. Searing is a process that seals natural juices in food by cooking with intense heat for a short period of time. While juices stay inside, the outside is browned with a flavorful grilled coating.

### **Indirect Heat**

For best results, do not select the indirect heat cooking method when it is windy.

Cooking by indirect heat means the food is placed on the grill grate above an unheated burner, allowing heat from lighted burner(s) on either side to cook the food.


If possible, turn on 2 burners. Cook with the hood down. This will shorten the cooking time.

# OUTDOOR GRILL CARE

## Replacing the Igniter Battery

If igniters stop sparking, the battery should be replaced.

1. Unscrew igniter button cap counter clockwise to remove.
2. Remove battery from the battery compartment.
3. Replace with a new alkaline “AA” size battery. Install battery with negative end in first.
4. Screw igniter push button cap clockwise into place.

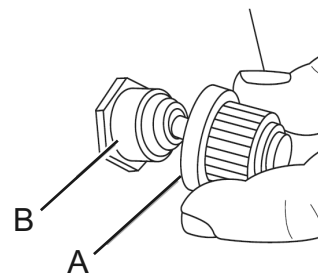

A. Igniter push button  
B. “AA” size battery

## General Cleaning

**IMPORTANT:** Before cleaning, make sure all controls are off and the grill is cool. Always follow label instructions on cleaning products.

For routine cleaning, wash with soap and water using a soft cloth or sponge. Rinse with clean water and dry at once with a soft, lint-free cloth to avoid spots and streaks.

To avoid scratching the surface, do not use steel wool to clean the grill.

Use vinyl grill cover, available from your local dealer, to protect finish from weather.

## STAINLESS STEEL

**IMPORTANT:** To avoid damage to the stainless steel surface, do not use soap-filled scouring pads, abrasive cleaners, cooktop polishing creme, steel wool, gritty wash cloths, paper towels or cleaners that contain chlorine.

Food spills should be cleaned as soon as entire grill is cool. Spills may cause permanent discoloration.

### **Cleaning Method:**

- Rub in direction of grain to avoid scratching or damaging the surface.
- Stainless Steel Cleaner.
- Liquid detergent or all-purpose cleaner:
- Rinse with clean water and dry with soft, lint-free cloth.
- Vinegar to remove hard water spots.
- Glass cleaner to remove fingerprints.

## PORCELAIN-COATED PARTS

To avoid chipping, do not bang porcelain covered parts with solid objects or drop them.

### **Cleaning Method:**

- Non-abrasive plastic scrubbing pad and mildly abrasive cleanser:

## GRILL GRATES

**IMPORTANT:** Do not use a steel or fiber scraper on grill grates. Immediately after you are finished cooking, loosen food soil with a brass bristle brush. Turn all burners to HI for 10-15 minutes with the hood closed to burn off food soil. Turn off all burners, raise the hood and let grates cool. Use the brass bristle brush to remove ash from the grill grates.

When completely cool, grill racks can be removed for thorough cleaning. Clean them with a mild detergent and warm water. For baked-on soil, prepare a solution of 1 cup (250 mL) ammonia to 1 gal. (3.75 L) water. Soak grates for 20 minutes, then rinse with water and dry completely.

# **OUTDOOR GRILL CARE (cont.)**

## **General Cleaning (cont.)**

### **WARMING SHELF**

#### **Cleaning Method:**

- Liquid detergent or an all-purpose cleaner.
- Rinse with clean water and dry with soft, lint-free cloth.
- For tough spots or baked-on grease, use a commercial degreaser designed for stainless steel.

### **EXTERIOR**

**IMPORTANT:** Make sure gas supply is off and all control knobs are in the OFF position. Make sure the side burner is cool. The quality of this material resists most stains and pitting, providing that the surface is kept clean, covered, and polished.

- Apply stainless steel polish to all brushed stainless steel noncooking surface before first use. Reapply after each cleaning to avoid permanent damage to surface.
- For tough spots or baked-on grease, use a commercial degreaser designed for stainless steel.
- Cleaning should always be followed by rinsing with clean warm water.
- Wipe the surface completely dry with a soft cloth.
- Liquid detergent or all purpose cleaner for all powder coated surfaces.

### **INTERIOR**

Discoloration of stainless steel on these parts is to be expected, due to intense heat from the burners. Always rub in the direction of the grain. Cleaning should always be followed by rinsing with clean, warm water.

#### **Cleaning Method:**

- Liquid detergent or all-purpose cleaner; or for small, difficult to clean areas, use a commercial degreaser designed for such use.
- A heavy-duty scrub sponge can be used with mild cleaning products.
- Rinse with clean water and dry completely with a soft, lint-free cloth.

### **SIDE BURNER CAPS AND GRATE**

#### **Cleaning Method:**

- Clean with a brass bristle brush.
- Wash grate using mild detergent, warm water and degreaser.
- Rinse with clean water and dry with soft, lint-free cloth.

### **BURNERS**

#### **Cleaning Method:**

- Clean the exterior of the burner with a wire brush.
- Clear any clogged burner ports with a straightened paper clip. Do not use a toothpick as it may break off and clog the port.
- Check and clean burner/venturi tubes.

# **OUTDOOR GRILL CARE (cont.)**

## **General Cleaning (cont.)**

### **DRIP PAN AND SHELF**

**IMPORTANT:** The drip pan should only be removed when grill is completely cool.

The drip pan collects grease that runs out through the grill. Clean often to avoid grease buildup.

The drip pan shelf collects grease and food particles that fall through the grill.

#### **Cleaning Method:**

- Remove drip pan. Wipe excess grease with paper towels.
- Clean with mild detergent and warm water. Rinse and dry thoroughly.
- Clean drip pan shelf periodically to avoid heavy buildup of debris.

### **KNOBS AND FLANGE AREA AROUND KNOBS**

**IMPORTANT:** Do not use steel wool, abrasive cleaners, or oven cleaner.

Do not soak knobs.

#### **Cleaning Method:**

- Mild detergent, a soft cloth and warm water.
- Rinse and dry.

### **CONTROL PANEL GRAPHICS**

**IMPORTANT:** Do not use steel wool, abrasive cleaners, or oven cleaner.

Do not spray cleaner directly onto panel.

#### **Cleaning Method:**

- Clean around the burner labels gently; scrubbing may remove printing.
- Clean with mild detergent, soft cloth and warm water.
- Rinse and dry.

# TROUBLE SHOOTING

## Grill will not light

- **Is the 20 lb LP gas fuel cylinder valve turned off?**

Turn the 20 lb LP gas fuel cylinder on.

- **Is the grill properly connected to the gas supply?**

Contact a trained repair specialist or see Installation Instructions.

- **Is there gas in the 20 lb LP gas fuel cylinder?**

Check the gas level.

- **Is the igniter working?**

Check that the igniter battery is properly installed or check to see if the battery needs to be replaced. See the “Replacing the Igniter Battery” section.

Check for loose wire connections to the igniter or electrodes.

## Flame is low or erratic

- **Is the gas supply fully turned on?**

Check that the 20 lb LP gas fuel cylinder valve is fully open.

- **Is the gas supply in the 20 lb LP fuel gas cylinder low?**

Check the gas level.

- **Does only one burner appear low?**

Check and clean the burner ports if clogged or dirty. See “General Cleaning” section.

- **Is the burner flame mostly yellow or orange?**

Grill may be in an area that is too windy. Check the burner air inlets for obstructions.

## ASSISTANCE

Before calling for assistance, please check “Troubleshooting.” If you still need help, follow the instructions below.


When calling, please know the purchase date and the complete model and serial number of your appliance. This information will help us to better respond to your request.

### **If you need replacement parts**


If you have questions or need replacement parts, contact Customer Service Hotline at 1-800-229-5647 or visit our website at [www.sureheat.com](http://www.sureheat.com).

Sure Heat Manufacturing  
1861 West Oak Parkway  
Marietta GA 30062


# REPLACEMENT PARTS

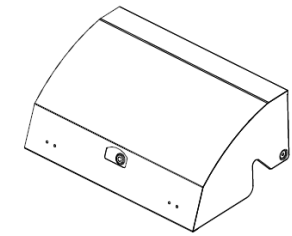

Hood Assembly  
 FCTG2708001  
 1 set

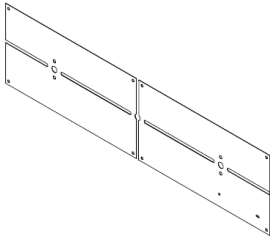

Front Face Overlay  
 FCTG2708005  
 1 set

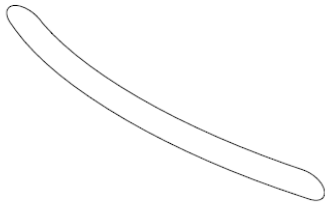


Hood Handle  
 FCTG2608002  
 1 pcs




Amana Logo  
 FCTG2608008  
 1 pcs




Temp Gauge  
 FCCS0007030  
 1 pcs

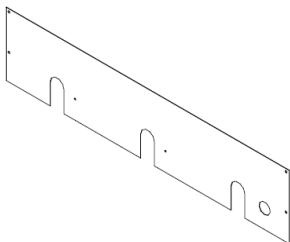


Front Face Heat Shield  
 FCTG2708006  
 1 pcs

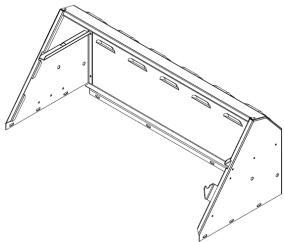


Hood Support Assy.  
 FCTG2708002  
 1 set

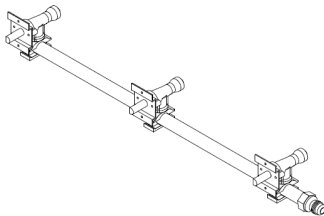

Manifold & Valve Assy.  
 FCTG2608010  
 1 pcs

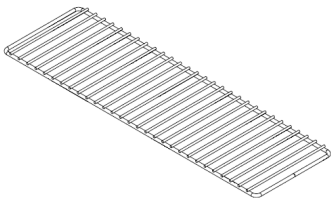


Bread Warmer Rack  
 FCTG2708003  
 1 pcs

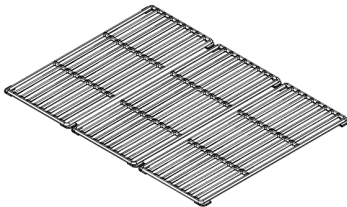


Main Cooking Grates (3 pcs)  
 FCTG2708007  
 1 set




Regulator & Hose Assy.  
 FCTG2608005  
 1 pcs

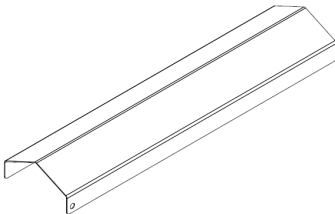

Flavor Grid (3 pcs)  
 FCTG2608012  
 1 set

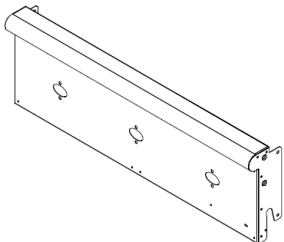


Front Face Assy.  
 FCTG2708004  
 1 set

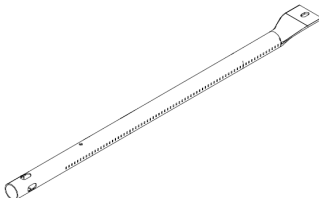


Main Burner Tube  
 FCTG2608013  
 3 pcs


# REPLACEMENT PARTS

 

Front top cross bar  
FCTG2708017  
1 set

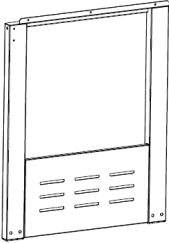


Cart side right  
FCTG27080013  
1 set

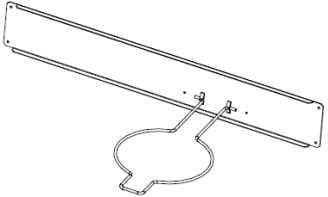

Cart back  
FCTG2708008  
1 set




Swivel Caster with Lock  
FCTG2608022  
2 pcs

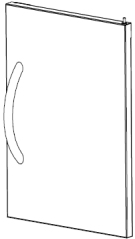


Cart door right assy.  
FCTG2708009  
1 set




Swivel Caster  
FCTG2608023  
2 pcs

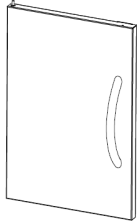

Cartl door left assy.  
FCTG2708010  
1 set

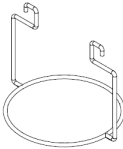


Drip Pan Holder  
FCTG2608024  
1 pcs

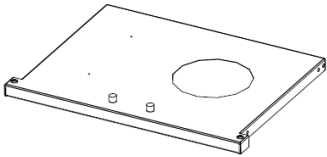


Cart base  
FCTG2708011  
1 set




Drip Pan  
FCTG2608025  
1 pcs

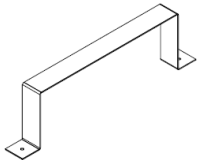


Cylinder Limit Handle  
FCTG2608019  
1 pcs

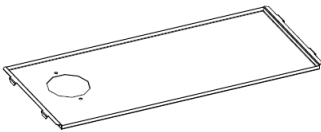

Bottom Heat Shield  
FCTG2708014  
1 pcs

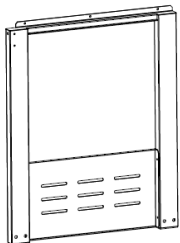


Cart side left  
FCTG2708012  
1 set

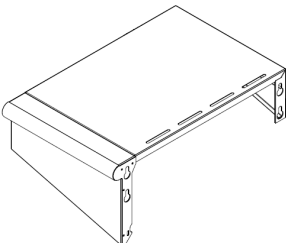

Side Shelf Left Assy.  
FCTG2708015  
1 set


# REPLACEMENT PARTS

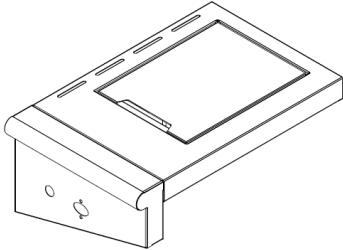


Side Burner Right Assy.  
 FCTG2708016  
 1 set



 
Side burner igniter with wire  
 FCTG2608030  
 1 pcs



Igniter Module 4 poles  
 FCTG3007029  
 1 pcs

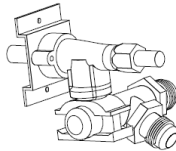


Side Burner Valve  
 FCTG2608032  
 1 pcs

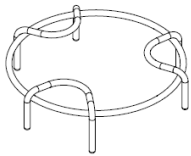

Side Burner Grate  
 FCTG2707026  
 1 pcs

- Additional Parts Not Shown
- |             |                            |       |
|-------------|----------------------------|-------|
| FCBJ3308028 | Main Igniter with Wire 740 | 1 pcs |
| FCBJ3308029 | Main Igniter with Wire 540 | 1 pcs |
| FCTG2608033 | Main Igniter with Wire 330 | 1 pcs |
| FCTG2608037 | Flex Line                  | 1 pcs |
| FCTG2908024 | Cart Door Magnet           | 1 pcs |
| FCTG2708018 | Small Hardware Pkg         | 1 set |

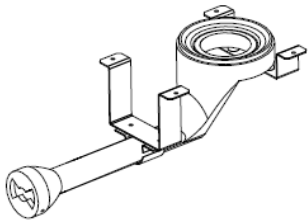

Side Burner Casting  
 FCTG2608029  
 1 pcs



Side Burner Cap - Brass  
 FCTG3007023  
 1 pcs



Large Control Knob  
 FCCS0007032  
 4 pcs



Large Bezel  
 FCCS0007033  
 4 pcs

## LIMITED WARRANTY

Sure Heat Mfg warrants that for 2 years from the date of purchase, the stainless steel panels will not break due to defects in material or workmanship. All other components of this grill are warranted free from defects in material and workmanship for one year from the date of purchase. Sure Heat Mfg. at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new manufactured product or component. if the product is no longer available, replacement may be made with a similar product of equal value. This warranty does not include transportation or shipping costs of any kind. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty parts.

This warranty does not cover normal wear of parts such as scratches and dents of the stainless steel components or damage resulting from any of the following:

- negligent use or misuse of the product, including exposing the product to chemicals or cleaning products not approved by Sure Heat Mfg.
- corrosion, rust or discoloring of any kind.
- use or installation contrary to specified instructions and applicable building codes, including heating the product to temperatures above its rated specifications which can cause considerable warping
- disassembly, including removal of the product from a built-in installation
- damage resulting from accident, alteration, misuse, abuse, hostile environments, or improper installation
- repair or alteration
- acts of God, such as fire, flood hurricanes, and tornadoes
- gas cylinders, propane tanks or other fuel delivery systems, including connections to a household fuel supply
- usage other than single-family household use such as commercial or industrial use
- minor warping or discoloration of parts, which is normal and not a defect under this warranty

### DO NOT RETURN THIS PRODUCT TO THE PLACE OF PURCHASE

If the Grill does not operate properly, first thoroughly carry out the instructions provided with the unit to ensure that the appliance is installed correctly and check the trouble shooting section in the use and care manual.

We recommend you return the warranty registration card so that you can be contacted with any questions of safety arise that could affect you. The return of the warranty registration card is not a condition for warranty coverage.

Because of continuing product improvement these specifications are subject to change without notice.

If you have other questions or need replacement parts contact our  
Customer Service Hotline at (800) 229-5647 or  
visit our website at [www.sureheat.com](http://www.sureheat.com)

**Sure Heat Manufacturing 1861 West Oak Parkway Marietta, GA 30062**