


INSTALLATION & OPERATING INSTRUCTIONS FOR

EMBERGLOW

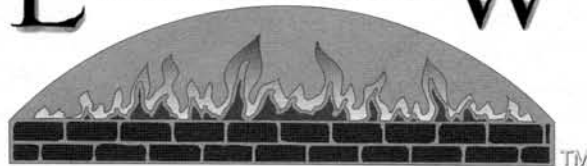

FIREPLACE GAS LOGS


Applicable for use with all styles and sizes of Topside Burner Energy Efficient Natural Gas Log Sets.

Note: Installer should leave these instructions with the consumer to retain for future reference.

**T
O
P
S
I
D
E

B
U
R
N
E
R

S
Y
S
T
E
M**

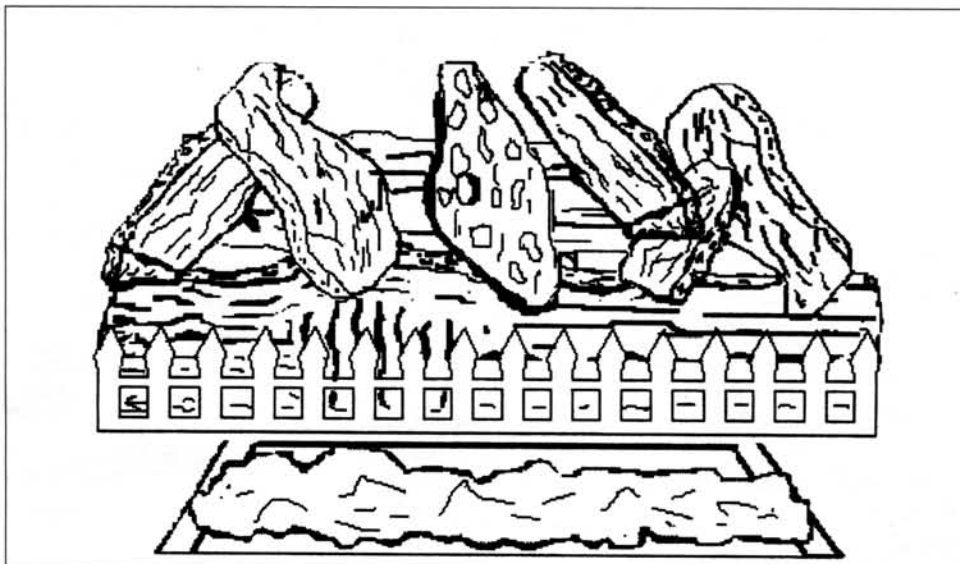

**B
U
R
N
E
R

S
Y
S
T
E
M

T
O
P
S
I
D
E**

PLEASE READ these instructions carefully before you begin to install this gas log set.


FOR YOUR SAFETY

- If you smell gas:
 1. Open windows;
 2. Don't touch electrical switches;
 3. Extinguish any open flame;
 4. Immediately call your gas supplier.
- Do not store or use gasoline or flammable vapors and liquids in the vicinity of this or any other appliance.
- Do not place clothing or other flammable material on or near the appliance.
- Children and adults should be alerted to the hazards of high surface temperature and should stay away to avoid burns or clothing ignition.
- Young children should be carefully supervised when they are in the same room as the appliance.



TOPSIDE BURNER PARTS LIST

Figure 1





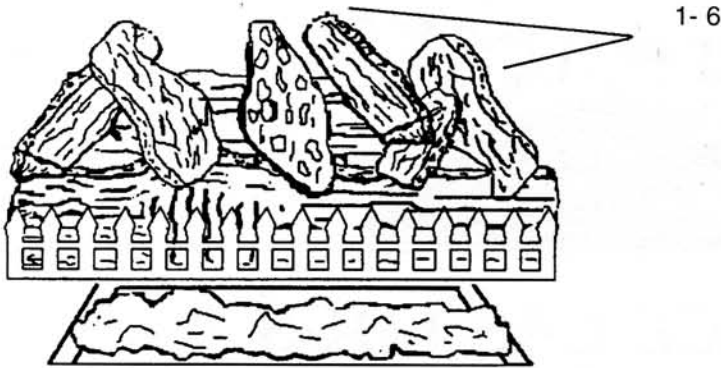


NUMBER OF LOGS ARE
DETERMINED BY THE SIZE
AND MODEL CHOSEN.
SETS RANGE FROM 4 TO 9 LOGS

GRANULES
(HEAVY WEIGHT
BAG)



GLOWING EMBERS
(LIGHT WEIGHT
BAG)

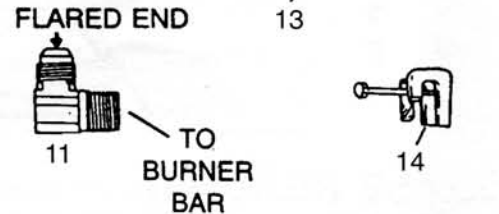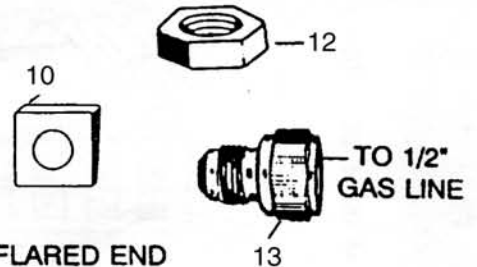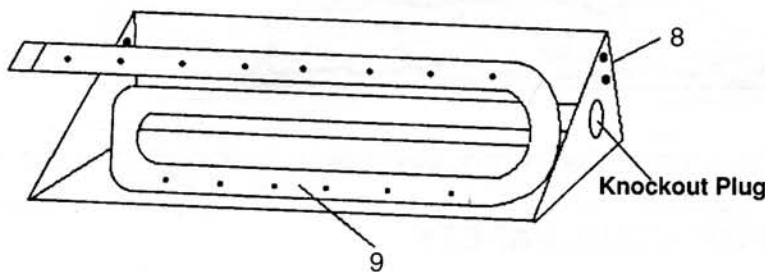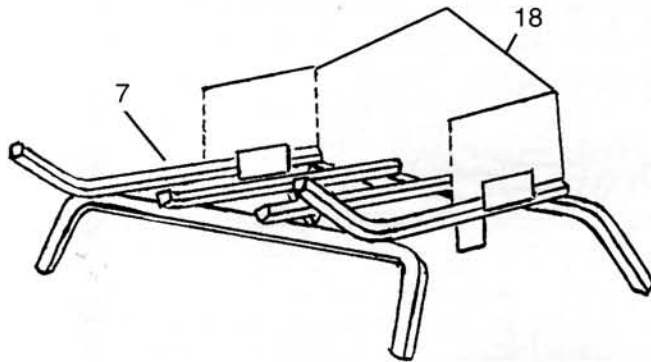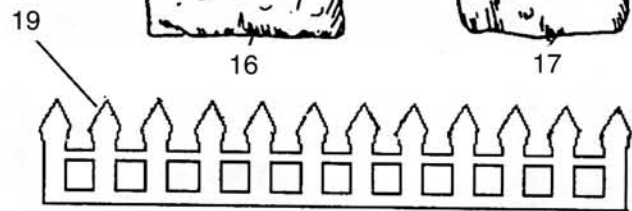

REF.	TOPSIDE RADCO	PART NUMBER	QTY	PART NUMBER	QTY	PART NUMBER	QTY
		18" SET		24" SET		30" SET	
1-6	LOGS						
7	GRATE	WIP-200-90555	1	WIP-200-90565	1	WIP-200-90567	1
8	BURNER PAN	WIP-200-90502	1	WIP-200-90504	1	WIP-200-90506	1
9	TOPSIDE BURNER BAR	WIP-190-90522	1	WIP-190-90524	1	WIP-190-90526	1
10	3/4" BURNER SUPPORT SPACER	RMH-120-00420	1	RMH-120-00420	1	RMH-120-00420	1
11	3/8" BRASS ORIFICE ELBOW	WIP-120-00350	1	WIP-120-00350	1	WIP-120-00350	1
12	3/8" LOCKNUT	RMH-120-00963	1	RMH-120-00963	1	RMH-120-00963	1
13	3/8" FLARED TO 1/2" GAS INLET FITTING	RMH-120-00653	1	RMH-120-00653	1	RMH-120-00653	1
14	DAMPER STOP CLAMP	RMH-120-00100	1	RMH-120-00100	1	RMH-120-00100	1
15	3/8" FLARED TUBING	WIP-120-90426	1	WIP-120-90426	1	WIP-120-90426	1
16	GRANULES	WIP-130-00010	1	WIP-130-00010	1	WIP-130-00010	2
17	GLOWING EMBERS	WIP-130-00300	1	WIP-130-00300	1	WIP-130-00300	2
18	BACK LOG STANDOFFS	WIP-190-90560	2	WIP-190-90560	2	WIP-190-90560	2
19	GRATE ENHANCER	RMH-120-90740	1	RMH-120-90750	1	RMH-120-90760	1
20	PIPE SEALANT	RMH-120-00180	1	RMH-120-00180	1	RMH-120-00180	1
21	INSTRUCTION MANUAL	RMH-130-00591	1	RMH-130-00591	1	RMH-130-00591	1
22	VIDEO	RMH-130-90414	1	RMH-130-90414	1	RMH-130-90414	1

1. This gas log set is only to be installed and burned in a fully vented fireplace with a fully functional damper and chimney that is free of any obstructions. The fireplace must be constructed of non-combustible materials and approved to burn wood. **WARNING: Do not burn wood or other material in any fireplace fitted with a gas log set.**
 2. **To operate this gas log set, the fireplace damper must be fully opened and locked.**
 3. The smallest or minimum dimension of the chimney flue must be 8 inches in diameter. Do not use an Energy Efficient Gas Log Set if it is smaller than 8 inches. Do not use an Energy Efficient Gas Log Set if fumes from the burner emerge into the room when the damper is fully open. This indicates that there is not adequate draft for our log set and the gas log sets must not be used until fireplace draft is corrected.
 4. This appliance must be installed with a Damper Stop Clamp (Part #14). When operating this gas log set, the flue damper must be fully open.
- WARNING:** *Improper use or installation may cause Carbon Monoxide Poisoning. Carbon Monoxide, which is an odorless and colorless gas, is a by-product of combustion. Caution must be taken to insure the fireplace is properly vented when logs are in use. To avoid having potentially dangerous fumes enter the living area, be sure the chimney is drawing properly and has sufficient draft.*
5. A fireplace screen must be in place when operating this gas log set. This screen shall have an opening(s) for the introduction of combustion air. If the fireplace has glass doors, operate this gas set with the doors fully opened.
 6. The nominal gas inlet pressure for this appliance is 7" water column for natural gas.
 7. This gas log appliance and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing at pressures in excess of 1/2 PSIG.

This appliance must also be disconnected from the gas supply system by closing its individual manual shutoff valve during any pressure testing at pressures equal to or less than 1/2 PSIG.

FIREPLACE PREPARATION

- A. Professionally clean chimney and fireplace floor of any combustible material to limit the smell from the system.
- B. Open fireplace damper fully and install Damper Stop Clamp with 1/4x2" set screw (Part #14). This clamp is designed to allow any pilot combustion on products to vent (See Figure 2.) Should the Damper Stop Clamp supplied not fit, a permanent damper stop clamp must be installed that will keep the damper open at a distance of not less than 1 1/2". Damper must be in full open position anytime this unit is in operation.
- C. Prior to connecting the gas log set, make sure that the gas supply to the fireplace is completely shut off.

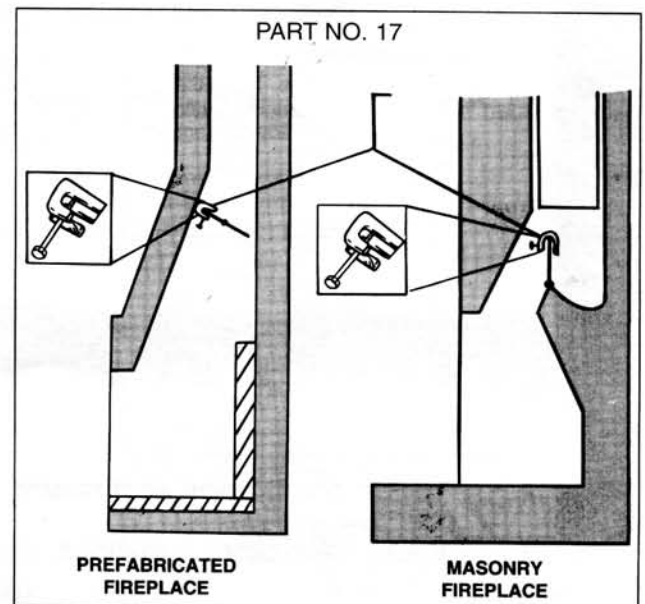


Figure 2. Damper stop clamp.

Installation of this Energy Efficient Gas Log Set and Provisions for combustion and ventilation air must conform with the National Fuel Gas Code ANSI Z223.1 and applicable local codes.

- D. **Installation to existing gas line in fireplace.** A manual on-off valve should be present within easy reach of the gas log set. If a manual valve is not present, one must be installed prior to the gas log installation.
- E. **Prefabricated fireplace.** Refer to the manufacturers fireplace instruction manual for specific information regarding the running of a gas line into that particular model.

A typical prefab installation involves the insertion of a 1/2 inch gas pipe through the gas line tube provided by each manufacturer from **outside** the fireplace. The knockout on the inside of the fireplace is removed as the gas pipe is punched through the fireplace.

An on-off valve should be placed within easy reach of the fireplace either inside the fireplace or in the wall. Repack any insulation removed from the gas line tube. (See figure 3.)

- F. **Masonry fireplaces.** A 1/2 inch gas supply line must be provided to the firebox. Most installations require drilling an access hole through the masonry wall. The supply line should be secured and sealed by mortar within the access hole. The supply line should also have an on-off valve either in the wall or inside the fireplace. (See Figure 4.)

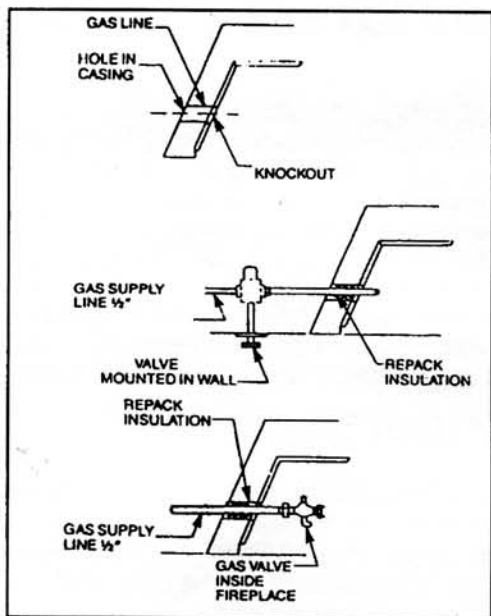


Figure 3. Gas line installation — Prefabricated fireplace.

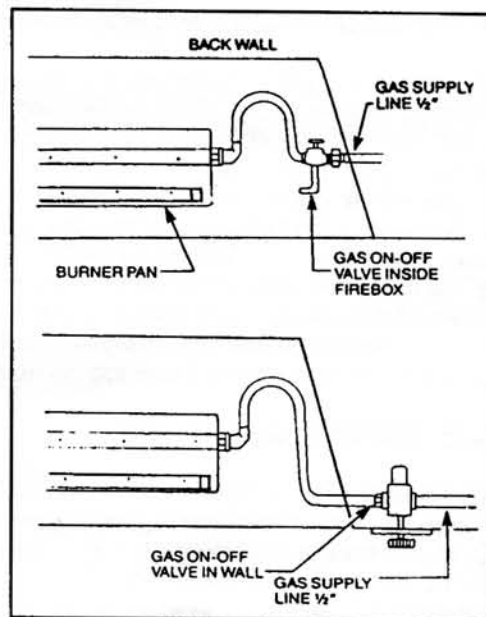


Figure 4. Gas line installation — Masonry fireplace.

GAS LOG INSTALLATION

(See Figure 1 Parts List as a guide to reference part numbers.)

BURNER PAN INSTALLATION

NOTE: Use pipe compound on all male threads to seal joints.

- A. The circular “dimpled” knockout plug must be punched out on the right side of the burner pan.
NOTE: Brace pan on workbench when removing burner knockout. Strike knockout with nail punch for easy removal.
NOTE: If your gas line is located on the left side of your fireplace a line must be run along the back of your fireplace to the right side of your burner pan.
- B. Locate 3/8” locknut (Part #12) and fasten it to the 3/8” brass orifice elbow (Part #11). Do not fasten the locknut on the “flared” end.
- C. Slide the 3/4” burner support spacer (Part #10) over the Topside Burner Bar (Part #9) and move spacer to opposite corner of the gas intake connection. (See Figure 5)


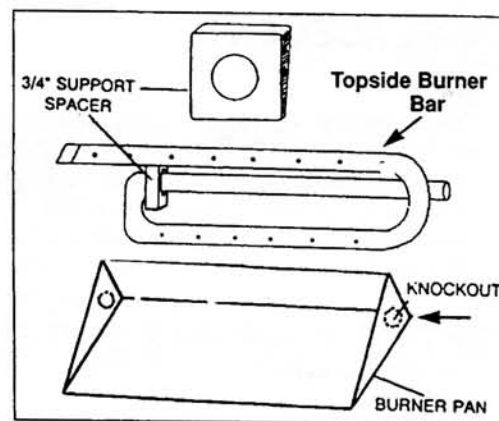


Figure 5. Burner bar placement


- D. Secure the intake end of the Topside burner bar (Part #9) to the burner pan (Part #8) through the knockout hole with the 3/8" brass orifice elbow (Part #11) and 3/8" locknut previously assembled in Step B. (See Figure 6.)
- E. Tighten elbow until firmly attached to the Topside burner bar. Then, firmly tighten the attached locknut on the elbow to seal the burner bar to the wall of the burner pan.

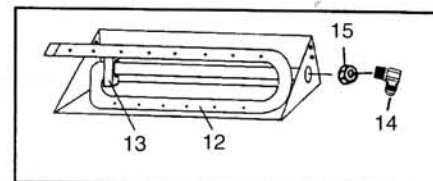

GRATE AND BURNER LOCATION

- A. Slide the top burner from the assembled burner system over the front part of the log grate. (See Figure 7.)

NOTE: The log grate should be put in place before hooking the unit to the gas line.

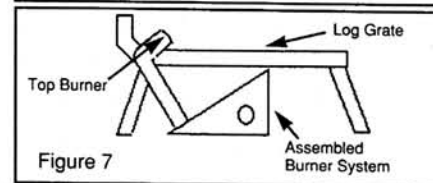

CONNECTING GAS SUPPLY TO BURNER ASSEMBLY

(If a Safety Pilot Kit is to be used, please refer to separate installation instructions.) These instructions refer to Natural Gas applications installed without a Safety Pilot Kit. (Safety Pilot kit [Model CVS-301] available at your local dealer.)

- A. Place burner and grate assembly in the center of the fireplace.
- B. Attach brass 3/8" Flared to 1/2" gas inlet fitting (Part #13) to the 1/2 inch gas supply line.
- C. Attach 3/8" flared tubing (part #15) to burner pan assembly. Attach opposite end to gas supply line by carefully bending the flared tubing as needed to make the connection. Avoid kinking the flared tubing while bending. If tubing must be cut, use a tube cutter. Flare the cut end of the tube with a flaring tool.
NOTE: A good method of bending the tube is to fill it with sand, bending the tube as needed to make the connection. This method will eliminate kinking in the line. Once the tube is in the desired configuration for hookup, be sure to empty the tube completely of any sand before tube is connected to the gas supply and the burner.
- D. Be certain all connections are tight and use pipe compound on all male threads to seal joints. Test all connections with a soapy water solution with the gas supply turned on. If bubbles appear on any connection, retighten and retest. Once it is determined there are no leaks whatsoever, turn off gas supply and move to next assembly step.


GRANULE, EMBER AND GRATE ENHANCER PLACEMENT

- A. Spread granules (Part #16) over the installed burner pan. Granules should be sloped to the same angle as the burner pan filling the entire pan. (See Figure 8A.)
NOTE: The bottom two burners should be covered leaving the top burner, which is above the grate, exposed.
- B. Spread 1/2 the glowing embers (Part #17) evenly over the top of the granules covering the entire surface area, concentrating on the front and sides of the burner pan for the most realistic burning effect.
- C. Install the grate enhancer (Part #19) by hanging the G.E. channels over the front part of the log grate. (See Figure 8B.)
- D. Cover the top burner with the remaining glowing embers, placing the embers between the grate enhancer and the top burner. (See Figure 8B)
- E. Attach the back log Standoffs (Part #18) to the back part of the grate. (See Figure 8B.)
NOTE: A hammer may be used to tap the back log standoffs in place.

LOG PLACEMENT

(Part Numbers 1 through 6)


- A. Place longest log in the front of the grate. Just behind the top burner.
- B. Place the second longest log on the back standoffs towards the back of the grate. Allow approximately 2 inches of separation of the bottom logs to allow for proper flame combustion.
- C. Arrange remaining logs on top of the two base logs. Top logs can be rearranged to achieve the desired flame pattern.

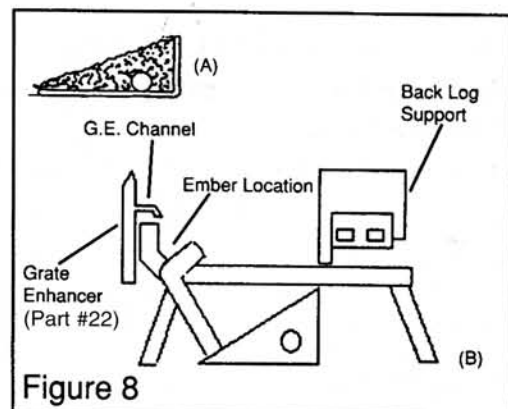

LIGHTING YOUR GAS LOG SET

(Manual valve only)

- A. Open chimney flue damper to the full open position.
- B. Be sure gas supply is shut off.
- C. Lay match on top of embers and granules near gas burner input.
Do not hold match in hand. (See Figure 9)
- D. With match burning, slowly turn on gas.

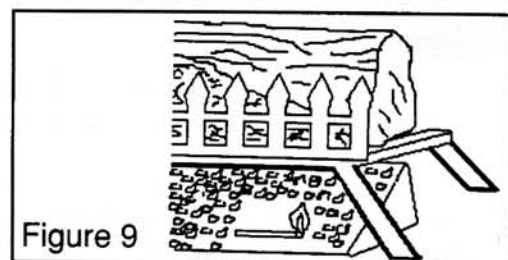

MAINTENANCE

Very little maintenance is required. The carbon deposit resulting from combustion is natural and adds to the realistic appearance of the set. If carbon becomes excessive it can be lightly brushed or vacuumed away.

TROUBLE SHOOTING

<u>Problem</u>	<u>Cause</u>	<u>Corrective Action</u>
1. No Ignition	-valve not on -gas line not clear	-turn valve on -inspect supply lines for tube kinks or obstructions
2. Inadequate flame	-valve partially closed -gas line obstruction -log arrangement	-open valve fully -burner inspection for tube kinks or obstructions -rearrange logs to desired pattern

LIMITED LIFETIME WARRANTY

Limited Lifetime Warranty shall apply to the original purchaser at the original installation point only

All logs are guaranteed for the lifetime of the original purchaser against destruction by fire or heat.

The burner assembly system is guaranteed for a period of three (3) years from the date of purchase and will be replaced for freight cost only.

Safety Pilot, valves and thermocouples are guaranteed for a period of one (1) year under the original manufacturer's warranty.

General Warranty: This warranty does not apply in the case of improper installation, neglect, accident, misuse or as a result of modifications of the original product.

All costs for removal and reinstallation are the expressed responsibility of the purchaser.

Repair, replacement, or service to defective part or parts to be secured at outlet of original purchase within first 30 days of purchase. Thereafter, with valid warranty registration and proof of purchase, ship defective part prepaid and insured in original carton to Sure Heat Manufacturing, 3130 Moon Station Road, Kennesaw, GA 30144. Goods returned improperly packaged are the sole responsibility of purchaser.

It is agreed that any repair or replacement is the exclusive remedy from Sure Heat Manufacturing. In no case shall Sure Heat be liable for any consequential damage for breach of this or any other warranty expressed or implied whatsoever. This limitation as to consequential damages shall not apply in states where prohibited.

Purchased From: _____ Date: _____

Size: 18" 24"/21" 30" Model:

Name _____ Phone (____) _____

Address _____

City _____ State _____ Zip _____

Please photocopy and return to Sure Heat within 14 days of purchase

If you have other questions, please contact the Customer Service Hotline
(800) 229-5647