


# Tuscany 30" Grill Maintenance Manual


## Replace the Main Burner:

1. Remove the main cooking grates and flavor grids.


2. Using a 1/4" socket remove the (3) screws holding the Shield to the Burner Support.

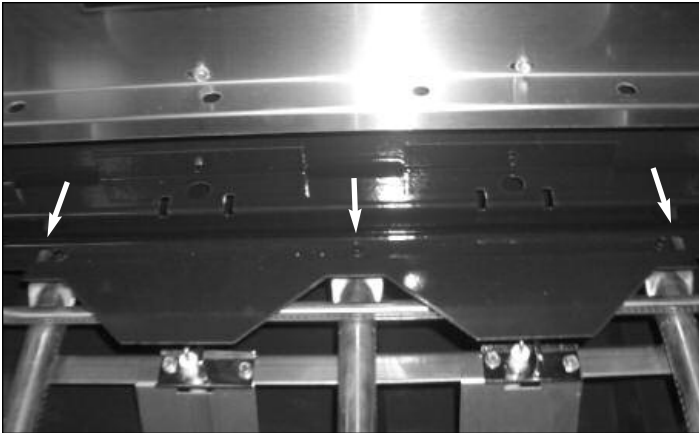


3. Remove the (4) screws holding the igniter to the burner bar.

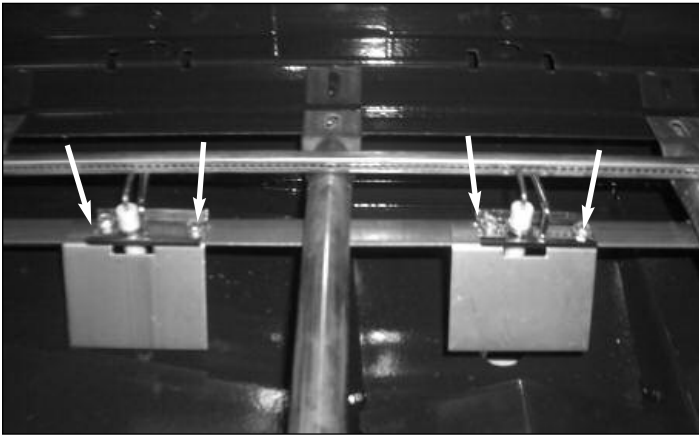


4. Remove the (3) screws on the Bottom IR Mounting Bracket. Then remove the bracket.

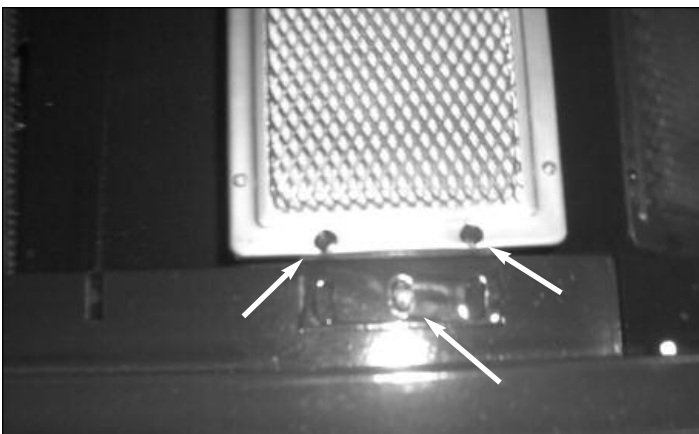

5. Remove the (6) screws holding the Front Heat Shield in position. Take the Front Shield away.

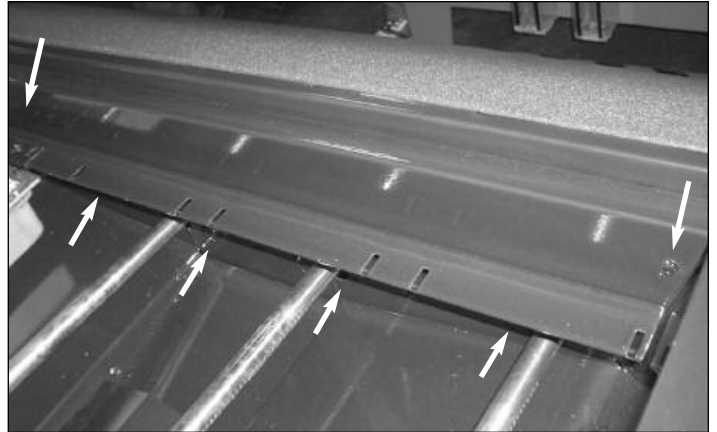

6. Lift the burner to the rear and up.

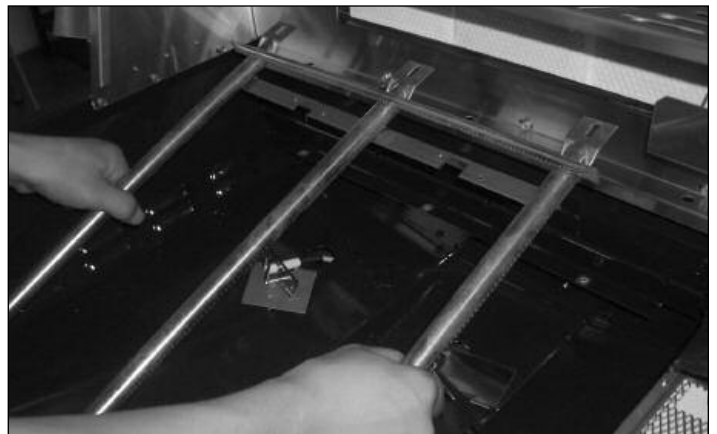

7. Place the new burner in the firebox, make sure the orifices of the valves go into the burner tubes.

8. Put the Front Heat Shield back and use the (6) screws removed in step 5 to secure the Front Heat Shield in position.

9. Put the Bottom IR Mounting Bracket back and use the (3) screws removed in step 4 to secure the bracket in position.

10. Put the igniters and Igniter Heat Shields back on the burner bar, use the screws removed in step 3 to secure the Igniter and Igniter Heat Shield in position.

11. Use the screws removed in step 2 to secure the Igniter Grease Shield back in position.

**Put the grates and flavor grids back and the replacement work is done, you can enjoy your grill now.**